Centricity™ SP1001 Digitizer

Reference manual

© GE Medical Systems Information Technologies 2002.

No parts of this document may be reproduced, copied, adapted or transmitted in any form or by any means without the written permission of GE Medical Systems Information Technologies.

GE Medical Systems Information Technologies makes no warranties or representation, expressed or implied, with respect to the accuracy, completeness or usefulness of the information contained in this document and specifically disclaims warranties of suitability for any particular purpose. GE Medical Systems Information Technologies shall under no circumstances be liable for any damage arising from the use or inability to use any information, apparatus, method or process disclosed in this document.

GE Medical Systems Information Technologies reserves the right to make changes to this document without prior notice.

GE Medical Systems Information Technologies, 8200 W. Tower Avenue, Milwaukee, WI 53223, USA.

GE Medical Systems Information Technologies GmbH, Munzinger Strasse 3, D-79111, Freiburg, Germany.

Centricity is a trademark of GE Medical Systems Information Technologies, USA.

GEMS and the GE signature are trademarks of General Electric Company, USA.

Table of contents

Chapter 1: Introducing the Centricity™ SP1001 5

Centricity™ SP1001 features 6
Safety precautions 7
Safety compliance 8
Operating modes 9
Configurations 10
The user interface 12
Switching on the Centricity™ SP1001 20
Switching off the Centricity™ SP1001 22

Chapter 2: Basic operation ('Operator mode') 23

Workflow 24
Reading an image plate 25
Reading an emergency image plate 31
Re-erasing an image plate 38
Reading the identification data of a cassette (Dedicated configuration only) 42
Changing the image plate type (Dedicated configuration only) 44

Chapter 3: Advanced operation ('Key-operator mode') 47

Consulting the image transmission queue ('Queue management') 48
Customizing the Centricity™ SP1001 ('Digitizer set-up') 52
Setting the date and time 57
Sending test images 58
Consulting information on the Centricity™ SP1001 59
Installing a new software version 63
Installing a new language 69
Installing new customer parameters 75
Saving the configuration data on a diskette (backup) 81
Enabling/disabling fast preview 85
Setting the fast preview station for emergency image plates 87

Chapter 4: Preventive maintenance and troubleshooting 89

Checking the image quality 90
Troubleshooting checklist 91
Replacing the erasure lamps 96
Checking the voltage supply 101
Solving image plate and cassette jams 104

Appendix A: Equipment information sheet 111

Appendix B: Index 115

Chapter 1

Introducing the Centricity™ SP1001

This chapter draws attention to important safety precautions and introduces the Centricity™ SP1001.

- ❑ Centricity™ SP1001 features
- ❑ Safety precautions
- ❑ Safety compliance
- ❑ Operating modes
- ❑ Configurations
- ❑ Safety compliance
- ❑ The user interface
- ❑ Switching on the Centricity™ SP1001
- ❑ Switching off the Centricity™ SP1001

Centricity™ SP1001 features

The Centricity™ SP1001 is a Digitizer for image plates retaining latent X-ray images. It has been developed for GEMS.

- The Centricity™ SP1001 accepts one cassette containing one image plate at a time. The Centricity™ SP1001:
  - takes the cassette containing the image plate from the cassette slot;
  - removes the image plate from the cassette;
  - scans the image plate;
  - converts the information of the latent image to digital data;
  - transmits the image data to the preview station;
  - erases the image plate and re-inserts it into the cassette;
  - gives the cassette ID data the status ‘erased’;
  - returns the cassette;
  - transmits the digital image data to an image processing station (‘destination’).
- The Centricity™ SP1001 permits assigning the status ‘emergency’ to an image. An emergency image will be given priority by the image processing station.
- The Centricity™ SP1001 permits re-erasing an image plate before re-using it. In specific cases, this is necessary to prevent ghost images caused by previous exposures or stray radiation from interfering with the image of interest.
- If the Centricity™ SP1001 is dedicated to one ID Station, additional features are available:
  - quickly identifying cassettes without the need for an ID Tablet;
  - reading the identification data of a cassette;
  - initializing a cassette, i.e. changing the image plate type.
- The Pathspeed™ CR Digitizers (Pathspeed™ SP1001 and Pathspeed™ MP3010) and the Centricity™ CR Digitizers (Centricity™ SP1001 and Centricity™ SP1001) are designed for operation with Agfa CR cassettes and Agfa CR phosphor plates. Contact your local GE Medical Systems sales agent for product and ordering information.

Safety precautions

General safety instructions

- The Centricity™ SP1001 has been designed for scanning medical X-ray image plates and should only be used for these purposes.
- The Centricity™ SP1001 must only be operated by qualified staff.
- Make sure that the Centricity™ SP1001 is constantly monitored in order to avoid inappropriate handling, especially by children.
- Only trained service personnel must make repairs. Only authorized service personnel must make changes to the Centricity™ SP1001.
- If there is any visible damage to the machine casing, do not start nor use the Centricity™ SP1001.
- If you want to connect the Centricity™ SP1001 with other devices, components or assemblies and if the technical data do not permit determining whether the combination with these devices, components or assemblies involves hazards, you must consult the respective manufacturers to avoid danger for operating personnel or the environment.
- Do not override or disconnect the integrated safety features.
- Switch off the Centricity™ SP1001 before performing any maintenance work or repairs. Disconnect the Centricity™ SP1001 from the mains before making repairs or performing any maintenance activities during which live electrical components may be exposed.
- As is the case for all technical devices, the Centricity™ SP1001 must be operated, cared for and serviced correctly.
- If you don’t operate the Centricity™ SP1001 correctly or if you don’t have it serviced correctly, GE Medical Systems Information Technologies is not liable for resulting disturbances, damages or injuries.
- When installing the Centricity™ SP1001, care must be taken to ensure that there is either a mains plug or an all-cable disconnecting device in the internal installation fitted near the Centricity™ SP1001 and that it is easily accessible.
- If you notice conspicuous noise or smoke, disconnect the Centricity™ SP1001 immediately.
- Check that the voltage setting of the machine matches the power supply voltage before connecting the machine to the mains.

Safety instructions for laser products

The Centricity™ SP1001 is a Class 1 Laser Product. Under normal operating conditions - when the service doors are closed - there can be no laser radiation outside the Centricity™ SP1001.

- Open the lower front door only to replace the erasure lamps or the fuses. Open the right side panel only to solve cassette or image plate jams. When you open the lower front door or the right side panel, the power supply is switched off automatically as a precaution.
- Follow meticulously the operation and troubleshooting instructions in the Centricity™ SP1001 User and Reference Manual. Other actions can be hazardous.

Safety compliance

The Centricity™ SP1001 complies with:

- the general safety regulations EN 60950, EN 60601-1-2, UL 1950 and CSA C22.2 No. 950;
- the radio interference regulations EN 55022:1997, Class B and FCC 47, Part 15, Subchapter B, Class A;
- the laser safety regulations EN 60825-1:1994 and DHHS/FDA 21 CFR, Parts 1040.10 and 1040.11.

Operating modes

The Centricity™ SP1001 can be operated in three modes: operator mode, key-operator mode, and service mode.

Operator mode

The operator mode groups all basic functions which are aimed at radiographers:

- Reading an image plate;
- Reading an emergency image plate;
- Re-erasing an image plate;
- Reading the identification data of a cassette (Dedicated configuration only);
- Changing the image plate type (Dedicated configuration only).

All functions of the operator mode are described in *Chapter 2, 'Basic operation ('Operator mode')'*.

Key-operator mode

The key-operator mode groups advanced functions which are aimed at technicians.

The key-operator mode can be accessed via the Key-operator key on the keypad and is menu-driven. The key-operator functions are described in *Chapter 3, 'Advanced operation ('Key-operator mode')'*.

Service mode

The service mode functions are reserved for trained service personnel. They are password protected.

Configurations

The Centricity™ SP1001 can be used in two configurations: either one or more ID Stations serve a range of Digitizers, or one ID Station is dedicated to one Digitizer. The ID Software installed on the ID Station is slightly different depending on the configuration. For more information, contact your local service organization.

Interchangeable configuration

One or more ID Stations can serve a range of Digitizers, provided that each ID Station has an ID Tablet. There is no physical link required between the ID Station and the Digitizer.

In this configuration, a cassette can be identified via any of the ID Stations and subsequently be scanned using any of the Digitizers. The patient demographic data and examination data are entered via the ID Station and stored in the memory chip of the Centricity™ CR compatible cassette via the ID Tablet. As a result the identification data are linked to the cassette and any Digitizer can be used to scan the cassette.

The interchangeable configuration permits the flexible use of several Digitizers and ID Stations depending on the workload.

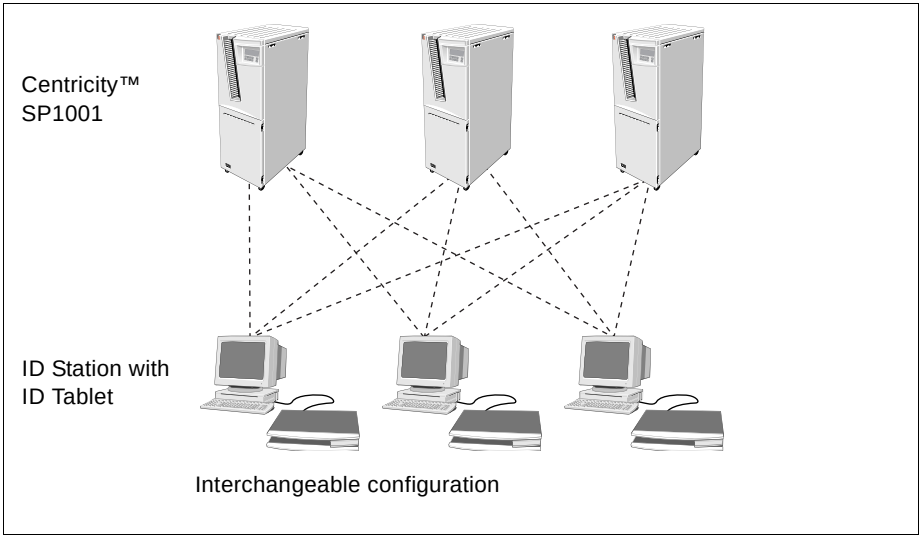

Interchangeable configuration

Dedicated configuration

If one ID Station is dedicated to one Digitizer, cassettes can be identified without using an ID Tablet. The identification data are transmitted from the ID Station to the Digitizer via the network.

The dedicated configuration reduces the time required for identifying and scanning a cassette because both actions can be performed simultaneously.

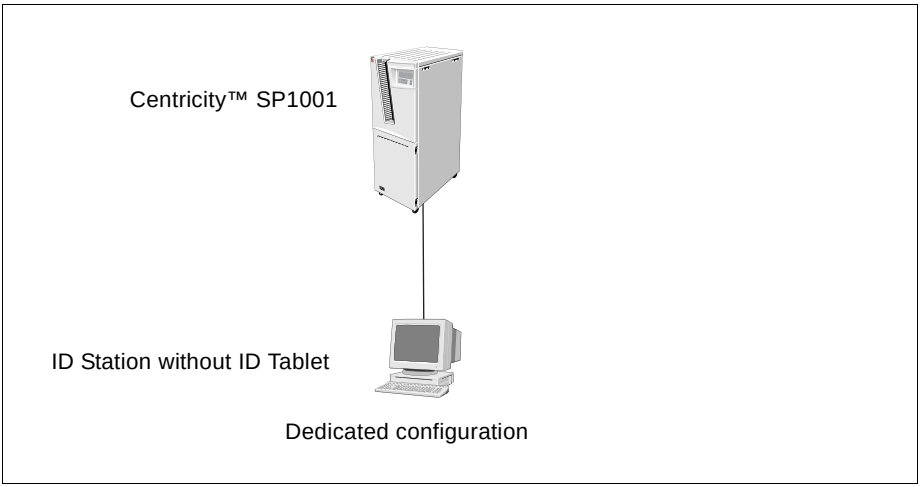

Dedicated configuration

❖ *In the dedicated configuration, you can still use the Centricity™ SP1001 to digitize cassettes which have been identified on other ID Stations.*

The user interface

The Centricity™ SP1001 has three operation modes:

- the **operator mode** for basic operation;
- the **key-operator mod**e for advanced operation;
- the **service mode** reserved for trained service personnel.

The functions of the operator mode are described in *Chapter 2, 'Basic operation ('Operator mode')'*. The functions of the key-operator mode are detailed in *Chapter 3, 'Advanced operation ('Key-operator mode')'*.

The Centricity™ SP1001 interfaces with the user via:

- a keypad and a display;
- a status indicator;
- emergency buttons;
- audio signals.

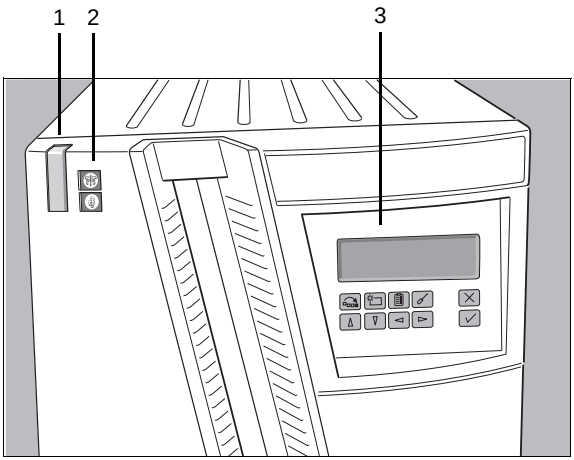

1	Status indicator
2	Emergency buttons
3	Keypad and display

The keypad

The Centricity™ SP1001 keypad features the following keys:

	Emergency key	To give an image the status ‘emergency’ when it is sent to the image processing station. This key can only be used for cassettes with ID data.
	Erase key	To erase images without digitizing them. This must be done if: • an image plate has not been used for more than 3 days; • an image plate has been exposed to an exceptionally high X-ray dose.
	Key-operator key	To access advanced functions (‘key-operator functions’).
	Service key	To access service-level functions. Reserved for trained service personnel.
	Escape key	To quit the current function or exit a menu without saving modifications.
	Confirm key	In key-operator mode: • to select a menu. • to accept an entry in a menu and go back to operator mode.

	Up key	• To move the cursor to the previous entry field. • To scroll upwards. • To increment the number in a numeric entry field.
	Down key	• To move the cursor to the next entry field. • To scroll downwards. • To decrement the number in a numeric entry field.
	Left key	• To scroll backwards through multiple choices within a field. • To move the entry position in a numerical entry field from right to left. • To toggle between values in a field.
	Right key	• To scroll forwards through multiple choices within a field. • To move the entry position in a numerical entry field from left to right. • To toggle between values in a field.

The display

The Centricity™ SP1001 control panel has a backlit LCD display with 8 lines of 40 characters each. Its lay-out depends on the operating mode.

- In **operator mode**, the display has dedicated areas for specific information:

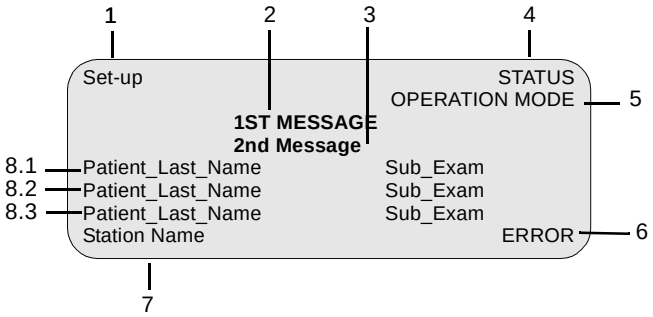

1	Set-up of image processing station: • [blank]: Default image processing station selected. • Off line: Transmission to all image processing stations disabled. • [process.station] not ready: Image processing station not available. • [process.station] rerouted: Images rerouted to other image processing station.
2	Type of message
3	Extra comment or action to take
4	System status: • READY: The Centricity™ SP1001 is ready for operation. • BUSY: The Centricity™ SP1001 is treating an image plate. • ERROR: An error has occurred. Refer to *Chapter 4, 'Preventive maintenance and troubleshooting'*. • LOCKED: id. • WARNING: id.
5	Operation mode: • [blank]: Normal operation mode. • EMERGENCY: Emergency function for image plates with ID data. • EMERGENCY BUTTON: Emergency function for image plates without ID data. • ERASURE: Re-erasure function. • DIRECT ID: Operation in dedicated configuration.
6	Error status: service code (SERVICE XXXXX) or error code (CODE XXXXX)

7	Station name of the Centricity™ SP1001
	Identifier of image plate being treated:
8.1	After image ID data is read;
8.2	During scanning of image plate and transmittal of image data;
8.3	During transmittal of image data to image processing station.

The operator main screen is:

When the Centricity™ SP1001 is treating an image plate, it displays the following screen:

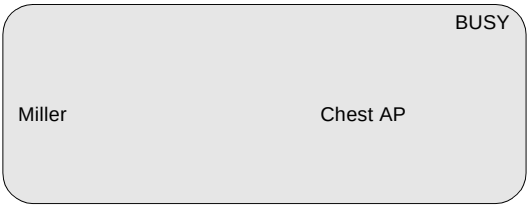

- In **key-operator mode**, operation is menu driven. The menu displays the key-operator functions, the active keys, and the service code.

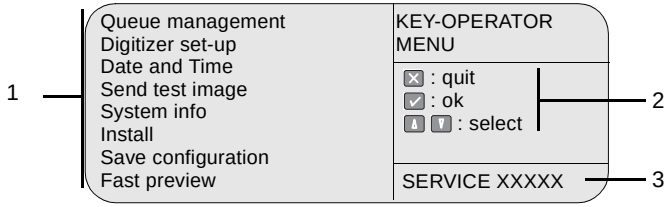

1	Key-operator functions
2	Active keys
3	Service code

- In **operator mode** and in **key-operator mode**, both informational and warning messages can be displayed. Informational messages are displayed as black text against a white background; warning messages are displayed in reverse mode.

The status indicator

The light at the top of the Centricity™ SP1001 indicates the status of the Centricity™ SP1001.

Color	Constant/ Flashing	Status	Action
Green	Constant	Ready.	Proceed.
	Flashing	Busy (treating image plate).	Wait.
Red	Constant	Error.	• Check display for messages. • Refer to *Chapter 4, 'Preventive maintenance and troubleshooting'*.
	Flashing	• Reading identification data of a cassette. • Initializing a cassette.	Wait.
	Flashing	• Locked or warning. • Power on/self-test in progress. • Key-operator mode. • Service mode. • Centricity™ SP1001 not connected to image processing station.	• Check display for messages. • Refer to *Chapter 4, 'Preventive maintenance and troubleshooting'*.

Emergency buttons

Two emergency buttons are located at the front of the Centricity™ SP1001. The emergency buttons determine the speed class, i.e. the sensitivity, which will be used to digitize the image plate. The sensitivity associated with the emergency buttons has been set during the configuration of your system. For more information, contact your local service organization.

The emergency buttons have the following labels:

	For digitizing images of the trunk.
	For digitizing images of the limbs.

- In the **interchangeable configuration**, the emergency buttons permit you to digitize emergency image plates without ID data.

- In the **dedicated configuration**, the emergency buttons permit you to digitize an image plate while you are entering the identification data via the ID Station.

Audio signals

The Centricity™ SP1001 gives status information via beeps. The length of the beep indicates the response of the system to a key command.

- A **short** beep means that Centricity™ SP1001 has accepted the key command and is starting the operation.
- A **long** beep means that you have pressed a non-active key or that the Centricity™ SP1001 has rejected the key command.
- An **interval** beep accompanies an error, locked or warning message. Refer to *Chapter 4, 'Preventive maintenance and troubleshooting'*.

Switching on the Centricity™ SP1001

1 Make sure that the setting of the voltage selector at the back of the machine matches the power supply voltage.

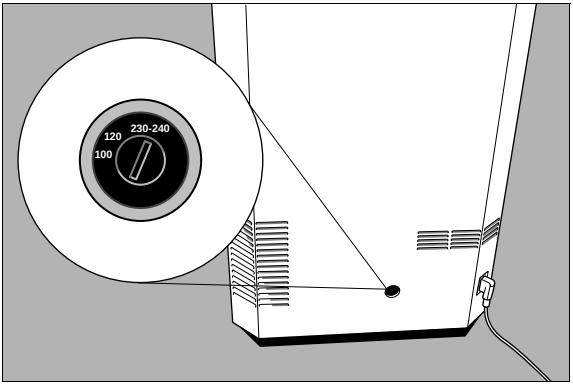

2 Locate the main switch and place it in position ‘I’.

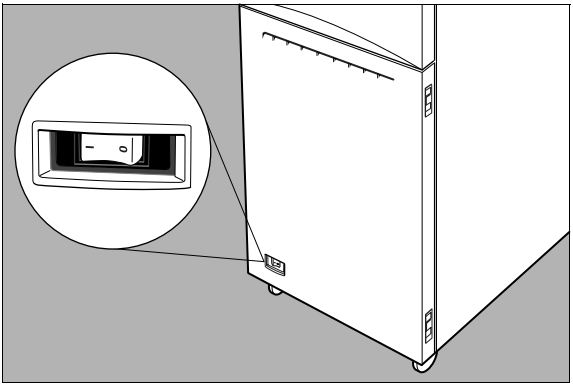

The machine starts a self-test which may take up to 3 minutes. The following screen is displayed:

WAIT
Self test proceeding

❖ *During the self-test, you cannot activate any functions.*

If the Centricity™ SP1001 has completed the self-test successfully, the Centricity™ SP1001 enters the operator mode and displays the operator main screen:

❖ *If the Centricity™ SP1001 displays:*

contact your local service organization.

Switching off the Centricity™ SP1001

Before switching off

Check that the Centricity™ SP1001 is not scanning an image plate. If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

Switching off

It is recommended to switch off the Centricity™ SP1001 at the end of the day.

Only switch off the Centricity™ SP1001 if you do not intend to digitize emergency image plates overnight. Switching on the Centricity™ SP1001 takes approximately 3 minutes. During this time emergency digitizing is not possible!

Place the main switch in position ‘0’.

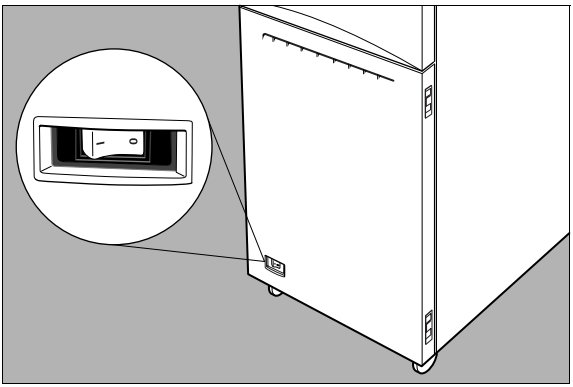

Chapter 2

Basic operation (‘Operator mode’)

This chapter provides basic information on how to digitize image plates under normal conditions and in emergency situations. It also treats how to re-erase an image plate to prevent ghost images caused by previous exposures or by stray radiation. These functions are available in operator mode.

- ❑ Workflow
- ❑ Reading an image plate
- ❑ Reading an emergency image plate
- ❑ Re-erasing an image plate
- ❑ Reading the identification data of a cassette (Dedicated configuration only)
- ❑ Changing the image plate type (Dedicated configuration only)

Workflow

The workflow for identifying cassettes and digitizing image plates depends on the configuration of your system.

- In the **interchangeable configuration** a cassette is uniquely identified by the identification data in the cassette chip. Therefore, you must first identify the cassette via the ID Station with ID Tablet before you can digitize the image plate. Refer to *'Reading an image plate in the interchangeable configuration' on page 25*.

  - ❖ *An exception are emergency image plates which you can digitize without having identified the cassette. The unidentified emergency image plate will be given default ID data. Refer to 'Reading an emergency image plate in the interchangeable configuration' on page 31.*

- In the **dedicated configuration** the identification data are transmitted from the ID Station to the dedicated Centricity™ SP1001 via the network. Therefore, the Centricity™ SP1001 can digitize the image plate while you are entering the identification data on the ID Station. Refer to *'Reading an image plate in the dedicated configuration' on page 28*.

Reading an image plate

The main function of the Centricity™ SP1001 is digitizing image plates and transmitting the digital image data to the preview station and the image processing station. The actual workflow depends on the configuration of your system.

Reading an image plate in the interchangeable configuration

In the interchangeable configuration, you must first identify the cassette via an ID Station with ID Tablet before you can digitize the image plate.

To read an image plate:

1 Make sure the cassette has been identified properly via the ID Station.

2 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

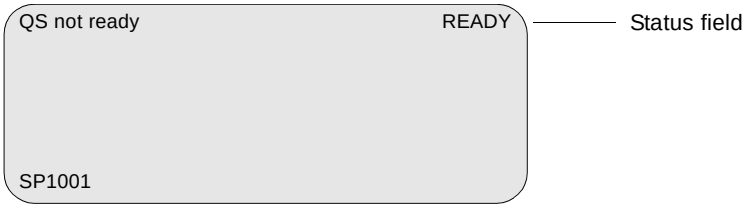

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals ‘READY’, even if status messages of the destination are shown (e.g. ‘QS not ready’).*

3 Insert the cassette containing the image plate into the cassette slot of the Centricity™ SP1001 as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

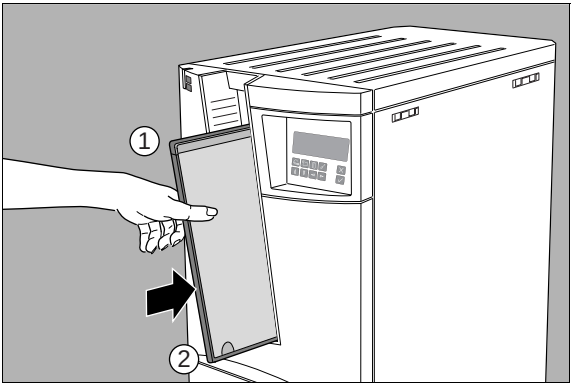

While treating the image plate, the Centricity™ SP1001 will display the following screen:

The Centricity™ SP1001:

- reads the cassette identification data;
- converts the information of the latent image to digital data;
- if fast preview is enabled, transmits the digital image data in blocks of typical 100 lines to the preview station;
- erases the image plate and re-inserts it into the cassette;
- gives the cassette ID data the status ‘erased’;
- returns the cassette;
- transmits the digital image data to the image processing station (‘destination’).

When the Centricity™ SP1001 has treated the cassette, it displays the operator main screen.

❖ If the Centricity™ SP1001 displays an error message, refer to *Chapter 4, ‘Preventive maintenance and troubleshooting’*.

4 Remove the cassette from the cassette slot.

When the Centricity™ SP1001 returns the cassette, it is ready to be re-used immediately. However, if you leave it for more than 3 days before re-using it, you must re-erase it first. Refer to 'Re-erasing an image plate' on page 38.

Reading an image plate in the dedicated configuration

In the dedicated configuration, the Centricity™ SP1001 can digitize the image plate while you are entering the identification data via the ID Station.

To read an image plate:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals ‘READY’, even if status messages of the destination are shown (e.g. ‘QS not ready’).*

2 Press the appropriate emergency button at the front of the Centricity™ SP1001.

The emergency button determines the speed class, i.e. the sensitivity, which will be used to digitize the image plate.

	For digitizing images of the trunk.
	For digitizing images of the limbs.

The button which you have pressed will be lit and the display will read:

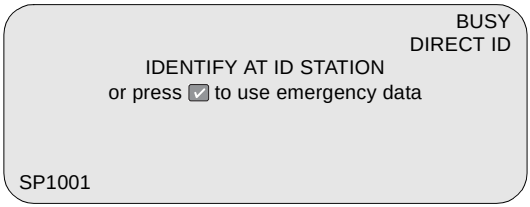

3 Insert the cassette containing the image plate into the cassette slot of the Centricity™ SP1001 as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

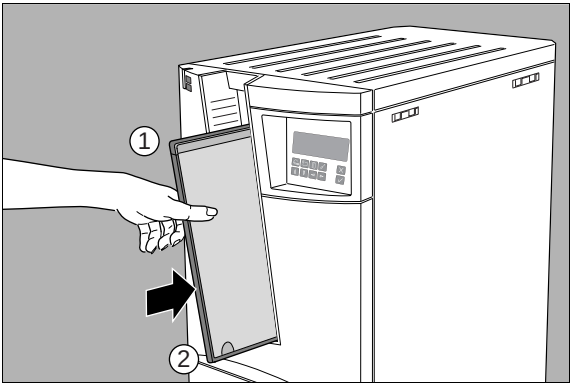

The Centricity™ SP1001 starts digitizing the image plate. You can enter the identification data, refer to step **4**.

While treating the image plate, the Centricity™ SP1001 will display the following screen:

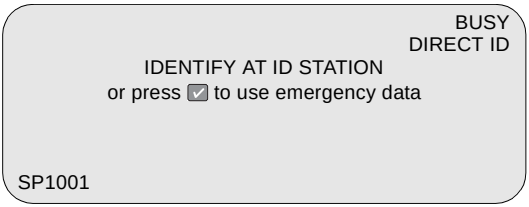

The Centricity™ SP1001 converts the information of the latent image to digital data.

❖ *If the Centricity™ SP1001 displays an error message, refer to Chapter 4, 'Preventive maintenance and troubleshooting'.*

4 Enter the identification data via the ID Station.

For detailed information, refer to the User manual of the Centricity™ CR ID Software.

As soon as you have entered the identification data, the Centricity™ SP1001 displays:

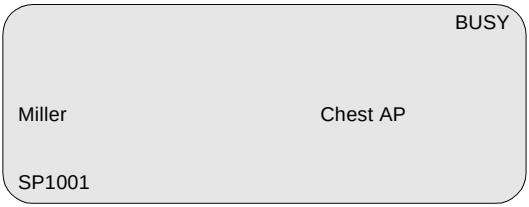

If fast preview is enabled, the image data are sent to the preview station as soon as you have entered the identification data. The image data are sent in blocks of typical 100 lines. For more information, refer to the User manual of the Centricity™ CR Preview Software.

As soon as the Centricity™ SP1001 has digitized the entire image plate and you have entered the identification data:

- the Centricity™ SP1001 erases the image plate and re-inserts it into the cassette;
- the Centricity™ SP1001 gives the cassette ID data the status ‘erased’.
- the cassette is returned to the cassette slot;
- the digital image data is sent to the image processing station (‘destination’).

When the Centricity™ SP1001 has treated the cassette, it displays the operator main screen.

5 Remove the cassette from the cassette slot.

When the Centricity™ SP1001 returns the cassette, it is ready to be re-used immediately. However, if you leave it for more than 3 days before re-using it, you must re-erase it first. Refer to ‘Re-erasing an image plate’ on page 38.

Reading an emergency image plate

You may have an image plate which you wish to give priority over other image plates which are being processed by the image processing station. Such image plates are referred to as 'emergency image plates'. The actual workflow depends on the configuration of your system.

Reading an emergency image plate in the interchangeable configuration

In the interchangeable configuration, you can treat either:

- emergency image plates with ID data via the Emergency key on the keypad;
- emergency image plates without ID data via the emergency buttons at the front of the Centricity™ SP1001.

Reading emergency image plates with ID data

To read an emergency image plate with ID data:

1 Make sure the cassette has been identified properly via the ID Station.

2 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with 'Ready' status, e.g.:

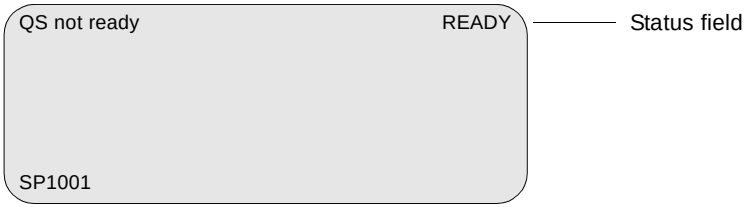

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals 'READY', even if status messages of the destination are shown (e.g. 'QS not ready').*

3 Press the Emergency key on the keypad.

The display will read:

READY
EMERGENCY
WARNING
Next cassette gets emergency status

SP1001

The emergency status will only be assigned to the first image plate which you insert into the Centricity™ SP1001 cassette slot after pressing the Emergency key.

4 Insert the cassette containing the emergency image plate into the cassette slot as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

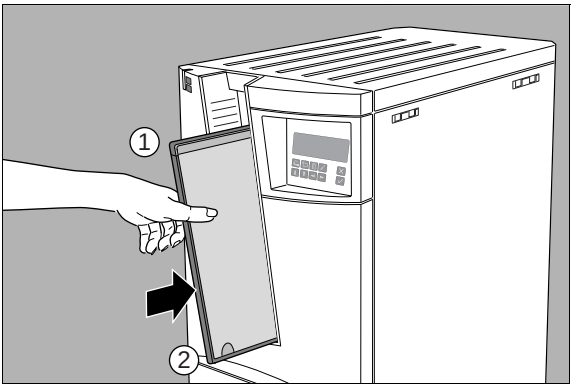

When the Centricity™ SP1001 has treated the emergency image plate, it displays the operator main screen. The image processing station will give the emergency image priority over the other images in the image processing queue.

❖ *If you do not enter a cassette within 1 minute after pressing the Emergency key or if you enter a cassette without ID data, the Centricity™ SP1001 will quit the emergency function and return to the operator main screen.*

5 Remove the cassette from the cassette slot.

Reading emergency image plates without ID data

To read an emergency image plate without ID data:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals ‘READY’, even if status messages of the destination are shown (e.g. ‘QS not ready’).*

2 Press the appropriate emergency button at the front of the Centricity™ SP1001.

The emergency button determines the speed class, i.e. the sensitivity, which will be used to digitize the image plate.

	For digitizing unidentified emergency images of the trunk.
	For digitizing unidentified emergency images of the limbs.

The button which you have pressed will be lit and the display will read:

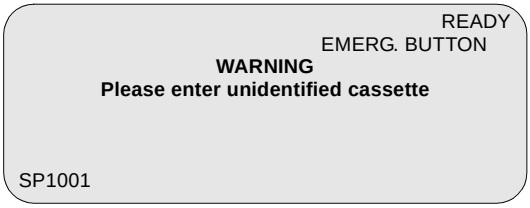

The emergency status will only be assigned to the first image plate which you insert in the Centricity™ SP1001 cassette slot after pressing the emergency button.

3 Insert the cassette containing the emergency image plate into the cassette slot as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

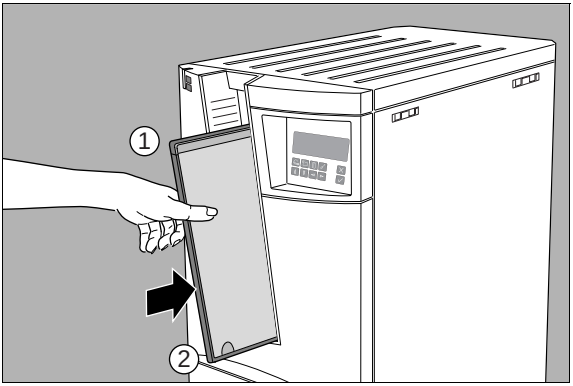

The image plate will be digitized using the speed class, i.e. the sensitivity, corresponding to the emergency button as defined during configuration.

When the Centricity™ SP1001 has treated the emergency image plate, it displays the operator main screen. The digital image data are transmitted to the image processing station accompanied by default ID data. The image processing station will give the emergency image priority over the other images in the image processing queue.

- ❖ *If you do not enter a cassette within 15 seconds after pressing the emergency button, the Centricity™ SP1001 will quit the emergency button function and return to the operator main screen.*

- ❖ *To change the speed class corresponding to the emergency button, contact your local service organization.*

4 Remove the cassette from the cassette slot.

Reading an emergency image plate in the dedicated configuration

In the dedicated configuration, you can digitize unidentified emergency image plates. The digital image data will be assigned default ID data.

To digitize an emergency image plate, you must press the Confirm key after you have inserted the cassette (refer to step 4). Image data transmission to the preview and the image processing station will be suspended until you have pressed the Confirm key.

To read an emergency image plate:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals ‘READY’, even if status messages of the destination are shown (e.g. ‘QS not ready’).*

2 Press the appropriate emergency button at the front of the Centricity™ SP1001.

The emergency button determines the speed class, i.e. the sensitivity, which will be used to digitize the image plate.

	For digitizing images of the trunk.
	For digitizing images of the limbs.

The button which you have pressed will be lit and the display will read:

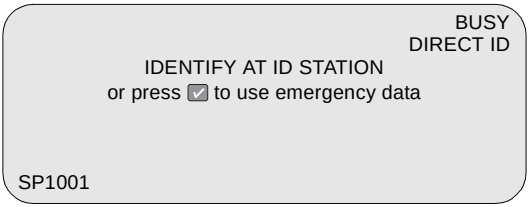

3 Insert the cassette containing the image plate into the cassette slot of the Centricity™ SP1001 as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

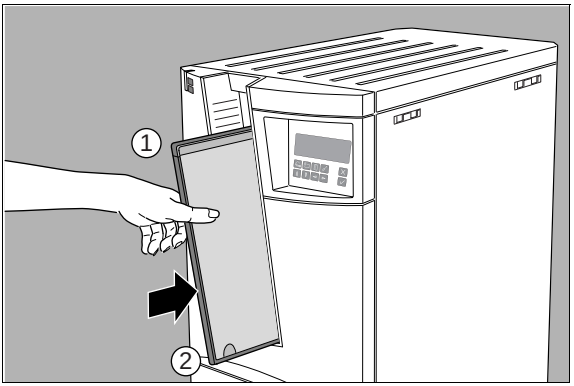

The Centricity™ SP1001 starts digitizing the image plate.

While treating the image plate, the Centricity™ SP1001 will display the following screen:

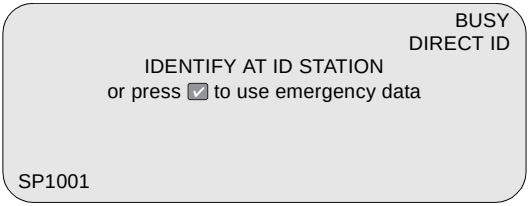

4 Press the Confirm key.

The Centricity™ SP1001 displays:

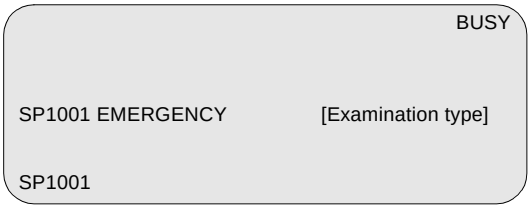

- If you pressed the emergency button for digitizing images of the limbs, [Examination type] equals ‘Extremities‘.
- If you pressed the emergency button for digitizing images of the trunk, [Examination type] equals ‘Corpus’.

When the Centricity™ SP1001 has treated the emergency image plate, it displays the operator main screen. The digital image data are transmitted to the image processing station accompanied by default ID data. The image processing station will give the emergency image priority over the other images in the image processing queue.

5 Remove the cassette from the cassette slot.

Re-erasing an image plate

At the end of a normal or emergency digitizing cycle, the Centricity™ SP1001 returns an erased image plate. However, in the following cases, you must re-erase the image plate before re-using it in order to prevent ghost images from interfering with the image of interest:

- If the image plate has not been used for more than 3 days.
  In this case, the image plate may have been exposed to stray radiation.
- If an image plate has been exposed to an exceptionally high X-ray dose.
  In this case, deep layers of the image plate may still retain a latent image after standard erasure. Leave the image plate to rest at least one day before re-erasing it.

You can erase image plates which you have given the status ‘to be erased’ via the ID Station or image plates which have the status ‘erased’.

Re-erasing image plates with status ‘erased’

To re-erase an image plate which has been erased as part of a normal or emergency digitizing cycle:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

2 Press the Erase key on the keypad.

The display will read:

3 Insert the cassette into the cassette slot.

While erasing, the Centricity™ SP1001 will still display the above screen. When the Centricity™ SP1001 has erased the image plate, it displays the operator main screen.

Warning

If the above screen is not displayed but the display reads:

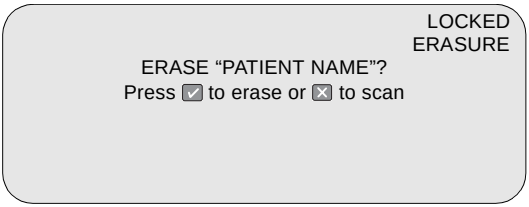

you have entered a cassette with ID data not having the status ‘erased’. You now have the choice: either cancel erasing or erase the image plate.

- To cancel erasing and make a regular scan: press the Escape key.

- To erase the image plate: press the Confirm key.

While erasing, the Centricity™ SP1001 will display:

When the Centricity™ SP1001 has erased the image plate, it displays the operator main screen.

4 Remove the cassette from the cassette slot.

Re-erasing image plates with status ‘to be erased’

To re-erase an image plate which you have given the status ‘to be erased’ via the ID station:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

2 Insert the cassette into the cassette slot.

The Centricity™ SP1001 will automatically erase the image plate. The display will read:

When the Centricity™ SP1001 has erased the image plate, it displays the operator main screen.

3 Remove the cassette from the cassette slot.

Reading the identification data of a cassette (Dedicated configuration only)

In the dedicated configuration, the identification data stored in the memory chip of the cassette can be read via the Centricity™ SP1001.

To read the identification data of a cassette:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals ‘READY’, even if status messages of the destination are shown (e.g. ‘QS not ready’).*

2 In the ID Software on the ID Station, select the mode for reading cassettes.

Refer to the User manual of the ID Software.

The display of the Centricity™ SP1001 will read:

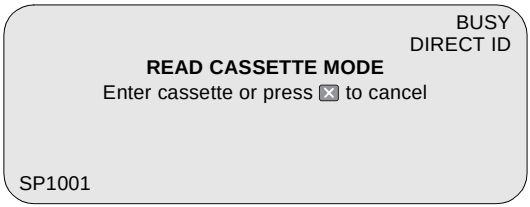

3 Insert the cassette containing the image plate into the cassette slot of the Centricity™ SP1001 as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

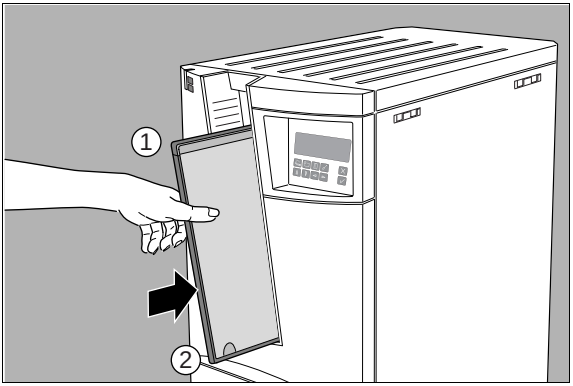

While the Centricity™ SP1001 reads the identification data from the cassette chip, the status indicator at the top of the machine is red and flashing.

The identification data will be displayed on the ID Station. Subsequently, the Centricity™ SP1001 returns the cassette to the cassette slot and displays the operator main screen.

4 Remove the cassette from the cassette slot.

Changing the image plate type (Dedicated configuration only)

If you use new generation Centricity™ CR compatible phosphor plates, the cassettes containing the plates must first be initialized. The new generation of plates can be identified by the plate type and the initializing code printed on the back (e.g. MD 30 19).

If you purchased cassettes already containing Centricity™ CR compatible phosphor plates, the cassettes are ready for use. If you purchased Centricity™ CR compatible phosphor plates or cassettes separately, the cassettes must be initialized first.

In the dedicated configuration, you can initialize cassettes via the Centricity™ SP1001.

To initialize a cassette:

1 Check that the Centricity™ SP1001 is ready for operation:

- the Centricity™ SP1001 must display the operator main screen with ‘Ready’ status, e.g.:

- the status indicator at the top of the Centricity™ SP1001 must be green and be lit constantly.

❖ *The Centricity™ SP1001 is operational if the status field equals ‘READY’, even if status messages of the destination are shown (e.g. ‘QS not ready’).*

2 In the ID Software on the ID Station, select the mode for initializing cassettes.

Refer to the User manual of the ID Software.

The display of the Centricity™ SP1001 will read:

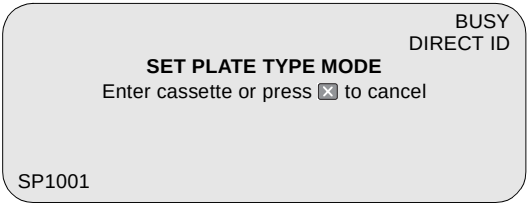

3 Insert the cassette containing the image plate into the cassette slot of the Centricity™ SP1001 as shown below.

Make sure to insert the cassette with the hinge [1] at the top and the locking mechanism [2] at the bottom.

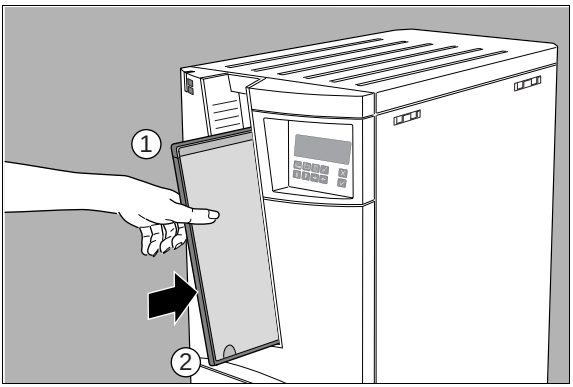

4 Enter the initialization code in the ID Software.

Refer to the User manual of the ID Software.

While the Centricity™ SP1001 the initializes the cassette, the status indicator at the top of the machine is red and flashing.

When the cassette has been initialized, the Centricity™ SP1001 returns the cassette to the cassette slot and displays the operator main screen.

5 Remove the cassette from the cassette slot.

Chapter 3

Advanced operation (‘Key-operator mode’)

This chapter covers the following topics:

- ❑ Consulting the image transmission queue (‘Queue management’)
- ❑ Customizing the Centricity™ SP1001 (‘Digitizer set-up’)
- ❑ Setting the date and time
- ❑ Sending test images
- ❑ Consulting information on the Centricity™ SP1001
- ❑ Installing a new software version
- ❑ Installing a new language
- ❑ Installing new customer parameters
- ❑ Saving the configuration data on a diskette (backup)
- ❑ Enabling/disabling fast preview
- ❑ Setting the fast preview station for emergency image plates

Consulting the image transmission queue (‘Queue management’)

As soon as the ID data of an image plate is read, the image identifier is stored in a queue. This queue contains information about which images are being transmitted to a certain image processing station (‘destination’) and their status. In key-operator mode, you can view this information and erase images from the image transmission queue.

Consulting the images in the queue

To view which images are being transmitted to a certain image processing station:

1 In the key-operator main menu, select ‘Queue management’ via the Up and Down keys and confirm.

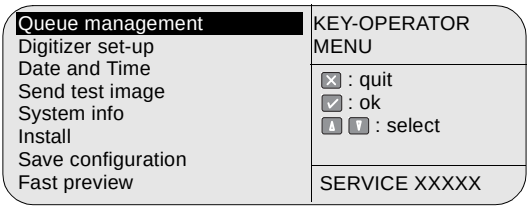

The Centricity™ SP1001 will display a list of installed image processing stations and the number of images sent to each:

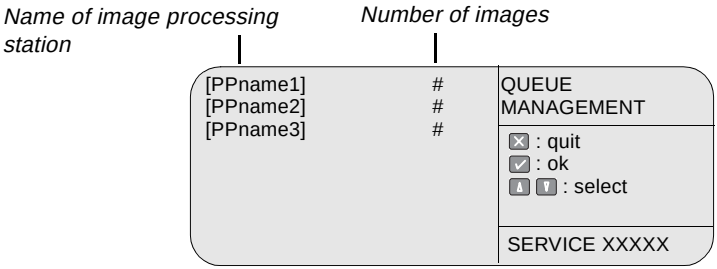

2 Select the image processing station of your choice via the Up and Down keys and confirm.

The Centricity™ SP1001 will display the list of images sent to the image processing station and their status ‘S’:

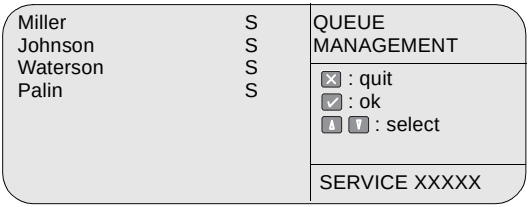

The status ‘S’ of an image is either:

‘S’	Status	Meaning
Q	**In queue**	Image is waiting in queue to be transmitted.
T	**Transmitting**	Image is being transmitted; Centricity™ SP1001 is waiting for acknowledgment.
W	**Warning**	Problem with image processing station.
E	**Exception**	Problem with image, cannot be transmitted.
[blank]	**ok**	Image has been transmitted successfully.

3 To return to the key-operator main menu, press the Escape key twice.

To go to the operator main screen, press the Confirm key.

Deleting images from the queue

To delete an image from the queue of images which are waiting to be sent to a specific image processing station, proceed as in *'Consulting the images in the queue' on page 48* (steps **1** to **2**). Subsequently, do the following:

1 In the list of images being sent to the image processing station, select the image which you want to delete via the Up and Down keys.

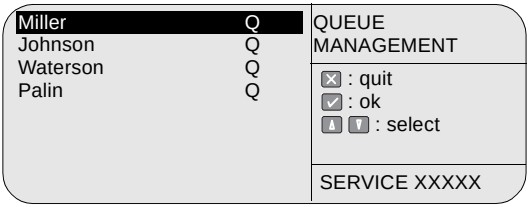

2 Press the Erase key.

The Centricity™ SP1001 will display:

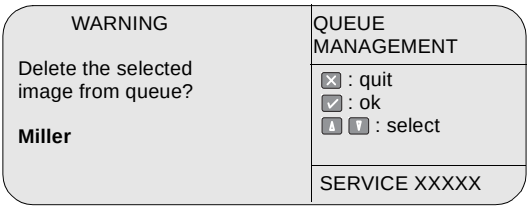

❖ *You can only erase images with status 'Q' (in queue), 'W' (warning) or 'E' (exception).*

3 To erase the image, press the Confirm key.

To cancel erasing, press the Escape key.

After the image has been erased, the Queue management screen is displayed again:

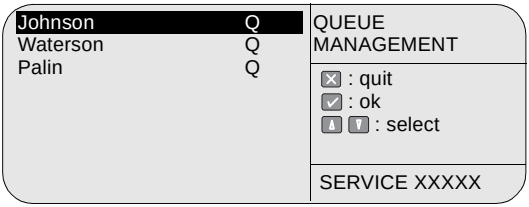

4 To return to the list of installed image processing stations, press the Escape key.

5 To return to the key-operator main menu, press the Escape key.

Customizing the Centricity™ SP1001 (‘Digitizer set-up’)

Via the Digitizer set-up function in key-operator mode, you can:

- enable or disable the transmittal of images to all image processing stations;
- reroute images to another image processing station (‘destination’);
- enable or disable all audio signals.

Enabling/disabling image transmission

1 In the key-operator main menu, select ‘Digitizer set-up’ via the Up and Down keys and confirm.

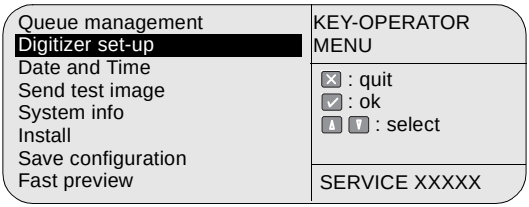

The Centricity™ SP1001 will display the Digitizer set-up menu:

Image transmission field

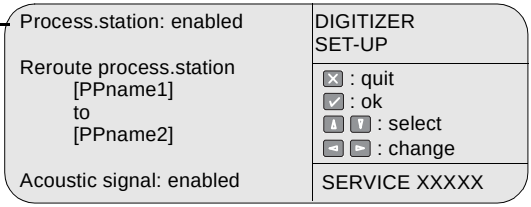

❖ *If you do not press a key within 1 minute, the Centricity™ SP1001 will exit the key-operator mode.*

2 Select the Image transmission field via the Up and Down keys.

3 Enable or disable the image transmission via the Left and Right keys.

4 Confirm your choice.

The operator main screen is displayed.

Changing the destination

If an image processing station is out of operation, you can reroute the images to another image processing station. Start as in *'Enabling/disabling image transmission' on page 52*:

1 In the key-operator main menu, select 'Digitizer set-up' via the Up and Down keys and confirm.

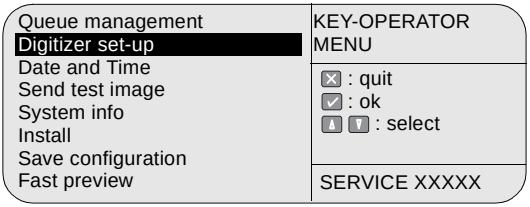

The Centricity™ SP1001 will display the Digitizer set-up menu:

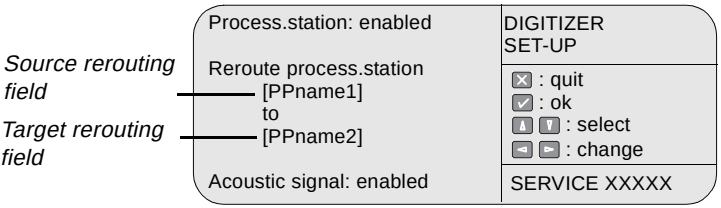

❖ *If you do not press a key within 1 minute, the Centricity™ SP1001 will exit the key-operator mode.*

2 Select the Source rerouting field via the Up and Down keys.

3 Select the image processing station from which you want to redirect the images via the Left and Right keys.

❖ *You can only redirect the images of one image processing station.*

4 Select the Target rerouting field via the Up and Down keys.

5 Select the image processing station to which you want to redirect the images via the Left and Right keys.

6 Confirm your choice.

The operator main screen is displayed.

Enabling/disabling all audio signals

To enable or disable all audio signals, start as in *'Enabling/disabling image transmission'* on page *52*:

1 In the key-operator main menu, select 'Digitizer set-up' via the Up and Down keys and confirm.

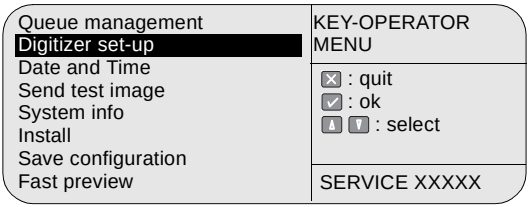

The Centricity™ SP1001 will display the Digitizer set-up menu:

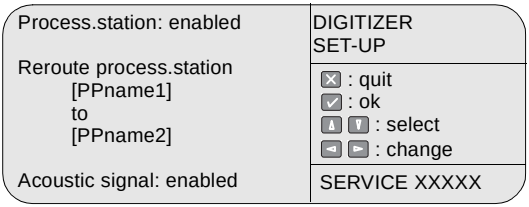

Audio signal field

❖ *If you do not press a key within 1 minute, the Centricity™ SP1001 will exit the key-operator mode.*

2 Select the Audio signal field via the Up and Down keys.

3 Enable or disable the audio signals via the Left and Right keys.

4 Confirm your choice.

The operator main screen is displayed.

Setting the date and time

To set the clock of the Centricity™ SP1001:

1 In the key-operator main menu, select ‘Date and time’ via the Up and Down keys and confirm.

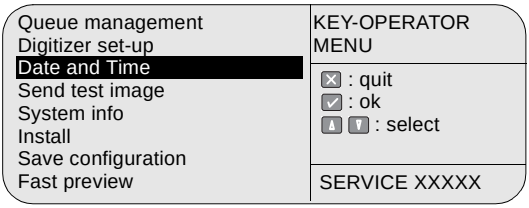

The Centricity™ SP1001 will display the Date and time menu:

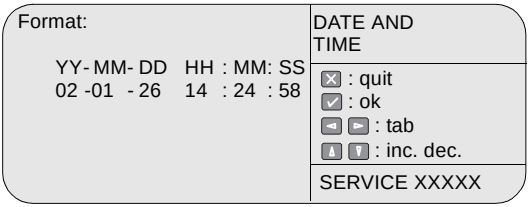

❖ *If you do not press a key within 1 minute, the Centricity™ SP1001 will exit the key-operator mode.*

2 Set the date and time:

- Use the Left and Right keys to select the digit you want to change (‘tab’);
- Use the Up and Down keys to set the digit to the desired value (‘inc. dec.’).

3 Confirm the date and time.

The operator main screen is displayed.

Sending test images

To check the communication between the Centricity™ SP1001 and the image processing station, you can send a test image from the Digitizer to the image processing station.

To send a predefined test image to a specific image processing station:

1 In the key-operator main menu, select ‘Send test image’ via the Up and Down keys and confirm.

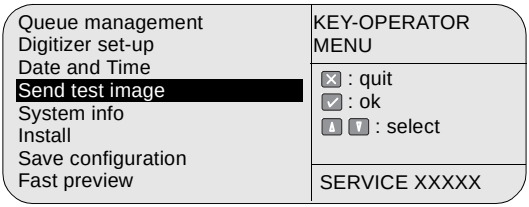

The Centricity™ SP1001 will display the Send test image menu:

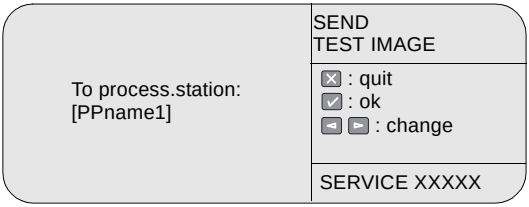

❖ *If you do not press a key within 1 minute, the Centricity™ SP1001 will exit the key-operator mode.*

2 Select the image processing station to which you want to send the test image via the Left and Right keys.

3 Confirm your choice.

The Centricity™ SP1001 will return to the operator screen.

Consulting information on the Centricity™ SP1001

Via the System info function in key-operator mode, you can consult:

- the device data of the Centricity™ SP1001;
- the network parameters of the Centricity™ SP1001.

Consulting the device settings

1 In the key-operator main menu, select ‘System info’ via the Up and Down keys and confirm.

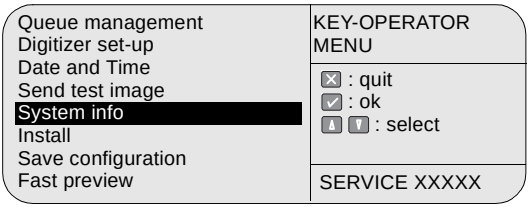

The Centricity™ SP1001 will display the System info menu:

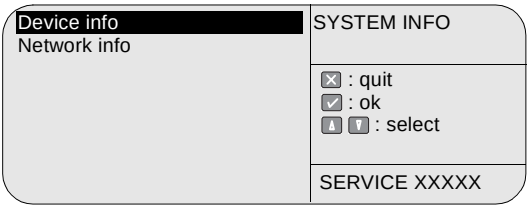

2 In the System info menu, select ‘Device info’ via the Up and Down keys and confirm.

The Centricity™ SP1001 will display the Device info menu, e.g.:

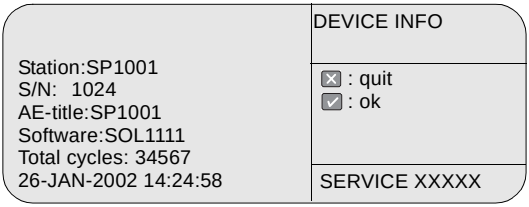

The Device info menu provides the following information:

Station	Device name of Centricity™ SP1001
S/N	Serial number Centricity™ SP1001: 5145 ‘S/N’
AE-title	SP1001
Software	Software version of Centricity™ SP1001
Total cycles	Total number of image plates which the Centricity™ SP1001 has treated
Date	Time and date indication of Centricity™ SP1001 clock

3 To return to the key-operator main menu, press the Escape key twice

To go to the operator main screen, press the Confirm key.

Consulting the network settings

1 In the key-operator main menu, select ‘System info’ via the Up and Down keys and confirm.

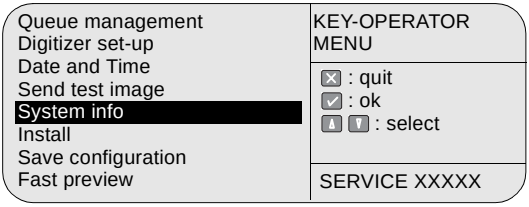

The Centricity™ SP1001 will display the System info menu:

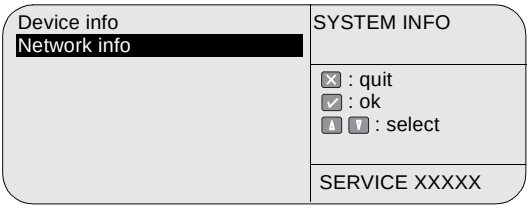

2 In the System info menu, select ‘Network info’ via the Up and Down keys and confirm.

The Centricity™ SP1001 will display the Network info menu, e.g.:

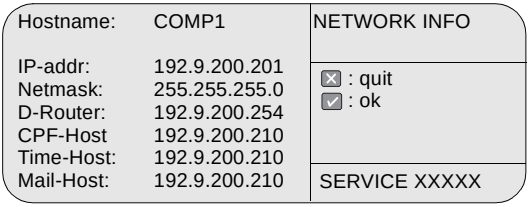

The Network info menu provides the following information:

Hostname	Name of host computer to which Centricity™ SP1001 is connected
IP-address	IP address of the Centricity™ SP1001

3 To return to the key-operator main menu, press the Escape key twice.
To go to the operator main screen, press the Confirm key.

Installing a new software version

Via this key-operator function you can copy a new software version from a floppy disk to the hard disk of the Centricity™ SP1001 and activate the new software.

❖ *When an error occurs during installation, refer to Chapter 4, 'Preventive maintenance and troubleshooting'.*

To install a new software version:

1 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

2 In the key-operator main menu, select 'Install' via the Up and Down keys and confirm.

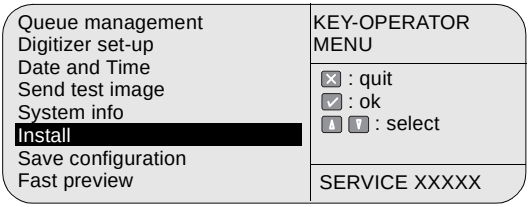

The Centricity™ SP1001 will display the Install menu:

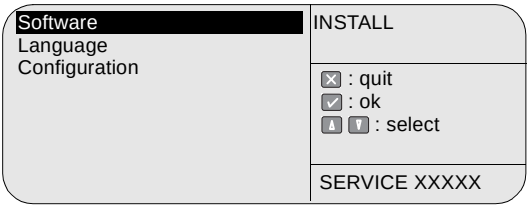

3 In the Install menu, select ‘Software’ via the Up and Down keys and confirm.

The Centricity™ SP1001 will display the Install software menu:

Please remove right side panel and insert the first floppy SOLOXXXX in diskette drive and press ☑	INSTALL SOFTWARE
	☒ : quit ☑ : ok
	SERVICE XXXXX

4 Open the side panel by unlocking the two locks at the side of the machine.

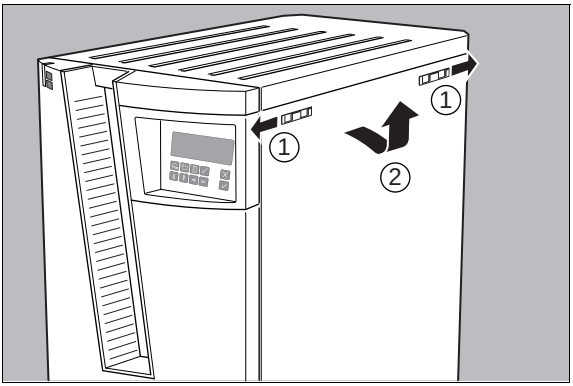

5 Remove the side panel.

The disk drive is located at the bottom of the machine.

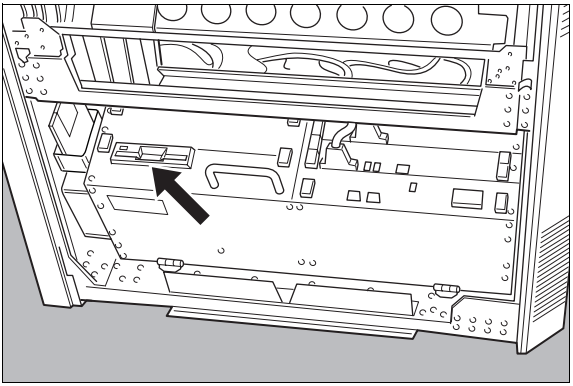

6 Insert the first floppy with the new Centricity™ SP1001 software in the disk drive and press the Confirm key.

The Centricity™ SP1001 will display:

Checking the volume label . . . Volume is <label>	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

Please wait . . . copying files to E:\temp	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

extracting. . . E:<file name> to C:<file name>	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

7 Wait until the Centricity™ SP1001 displays:

Please remove the floppy and press ☑	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

8 Remove the floppy from the disk drive and press the Confirm key.

If the Centricity™ SP1001 displays the screen below, insert the second software floppy:

Please insert the floppy SOL_XXXX_2_3 and press ☑	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

XXXX = software version

Proceed identically for the remaining floppy disks.

9 Wait until the Centricity™ SP1001 displays:

SW successfully installed To initialize the new SW a reset is necessary Press ☑ to reset now	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

10 To make the new software operational, press the Confirm key.

The Centricity™ SP1001 will restart automatically. After 3 minutes it will display:

New software detected. You should refresh your backup now. Please insert the backup floppy and press ☑	INSTALL SOFTWARE ☒ : quit ☑ : ok SERVICE XXXXX

You must make new backup files with the machine specific configuration data.

11 Insert an empty formatted floppy into the disk drive and press the Confirm key.

The Centricity™ SP1001 will start copying the machine specific configuration data while displaying the Save configuration screen:

copying . . . D:\SOL_<serial#>.zip to A:<path><file name>	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

12 When the screen below is displayed, note down the serial number and the date.

Machine configuration saved. Label the floppy: Backup Centricity™ SP1001 S/N: <serial#> Date: <date> Please remove the floppy and press ☑	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

13 Remove the floppy from the disk drive and label it with the data from the screen.

14 Store the Centricity™ SP1001 software floppies and the backup floppy in the storage box at the bottom of the machine.

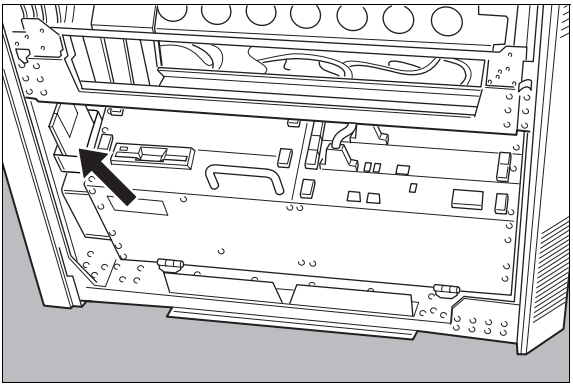

15 Reinstall the right side panel.

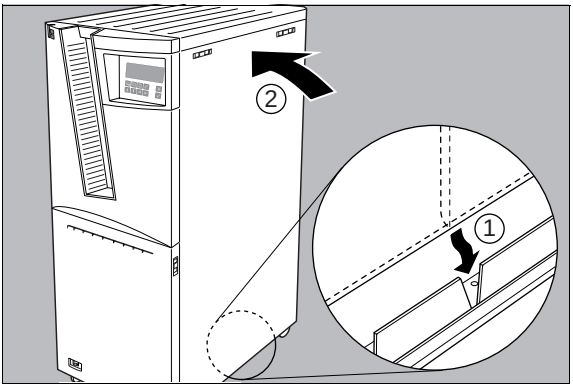

The Centricity™ SP1001 will restart automatically.

After start-up, the operator main screen is displayed.

Installing a new language

Via this key-operator function you can copy new language files from a floppy disk to the hard disk of the Centricity™ SP1001 and activate the new language(s).

❖ *When an error occurs during installation, refer to Chapter 4, 'Preventive maintenance and troubleshooting'.*

To install new languages:

1 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

2 In the key-operator main menu, select 'Install' via the Up and Down keys and confirm.

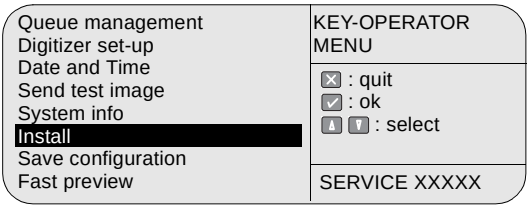

The Centricity™ SP1001 will display the Install menu.

3 In the Install menu, select 'Language' via the Up and Down keys and confirm.

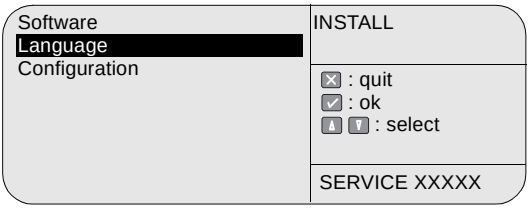

The Centricity™ SP1001 will display the Install language menu:

Please remove right side panel and insert the language floppy SOLOXXXX and press ☑	INSTALL LANGUAGE
	☒ : quit ☑ : ok
	SERVICE XXXXX

4 Open the side panel by unlocking the two locks at the side of the machine.

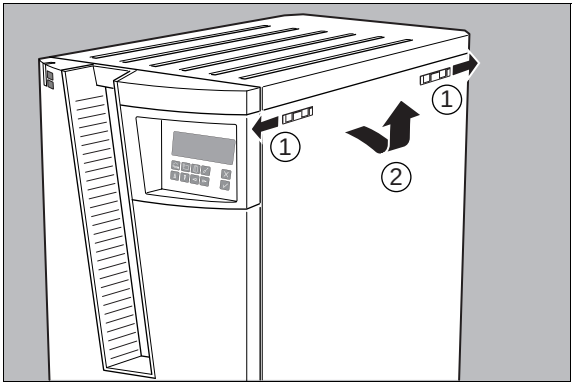

5 Remove the side panel.

The disk drive is located at the bottom of the machine.

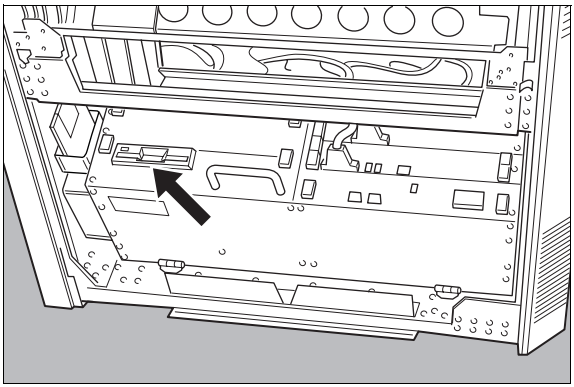

6 Insert the floppy with the new language files in the disk drive and press the Confirm key.

The Centricity™ SP1001 will display:

copying . . . A:<file name> to C:<file name>	INSTALL LANGUAGE ☒ : quit ☑ : ok SERVICE XXXXX

Language successfully loaded Please remove the floppy and press ☑	INSTALL LANGUAGE ☒ : quit ☑ : ok SERVICE XXXXX

7 Remove the floppy from the disk drive and press the Confirm key.

The Centricity™ SP1001 will display:

Do you want me to change my user terminal language?	INSTALL LANGUAGE ☒ : quit ☑ : ok SERVICE XXXXX

8 You have the choice to change the language of the user interface:

- If you do not want to change the language of the user interface, press the Escape key and proceed with step **10**.

- If you want to change the language, press the Confirm key.

The Centricity™ SP1001 will display:

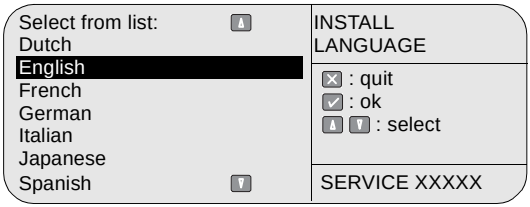

9 Select the desired language from the list via the Up and Down keys and confirm your choice.

The Centricity™ SP1001 will display:

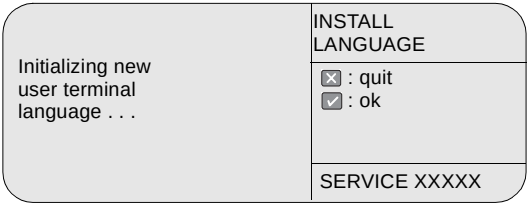

10 Wait until the display reads:

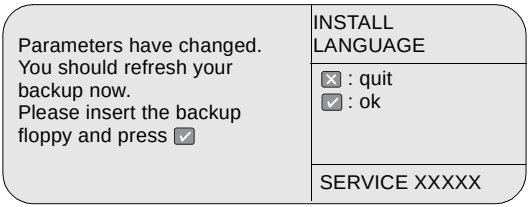
Parameters have changed. You should refresh your backup now. Please insert the backup floppy and press
INSTALL LANGUAGE
: quit
: ok
SERVICE XXXXX

You must make new backup files with the new parameters.

11 Insert an empty formatted floppy into the disk drive and press the Confirm key.

The Centricity™ SP1001 will start copying the machine specific configuration data while displaying the Save configuration screen:

copying . . . D:\SOL_<serial#>.zip to A:<path><file name>	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

12 When the screen below is displayed, note down the serial number and the date.

Machine configuration saved. Label the floppy: Backup Centricity™ SP1001 S/N: <serial#> Date: <date> Please remove the floppy and press ☑	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

13 Remove the floppy from the disk drive and label it with the data from the screen.

14 Store the Centricity™ SP1001 language floppy and the backup floppy in the storage box at the bottom of the machine.

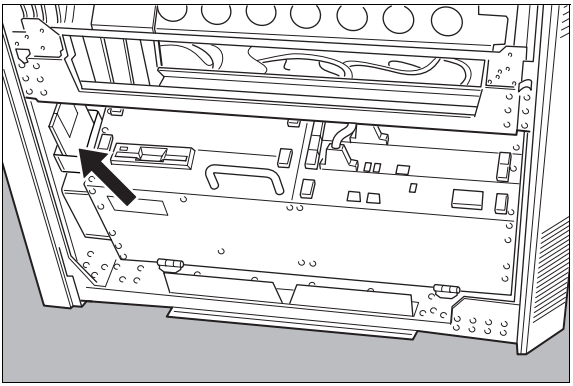

15 Reinstall the right side panel.

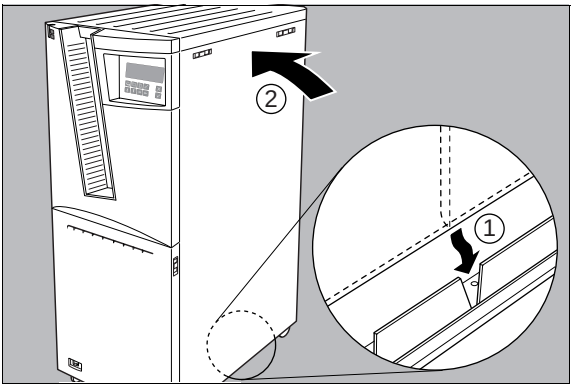

The Centricity™ SP1001 will restart automatically.

After start-up, the operator main screen will be displayed.

Installing new customer parameters

Via this key-operator function you can copy new customer parameter files (CPF-files) from a floppy disk to the hard disk of the Centricity™ SP1001 and activate the new parameters.

❖ *When an error occurs during installation, refer to Chapter 4, 'Preventive maintenance and troubleshooting'.*

To install new customer parameters:

1 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

2 In the key-operator main menu, select 'Install' via the Up and Down keys and confirm.

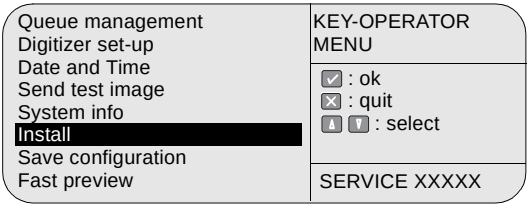

The Centricity™ SP1001 will display the Install menu.

3 In the Install menu, select 'Configuration' via the Up and Down keys and confirm.

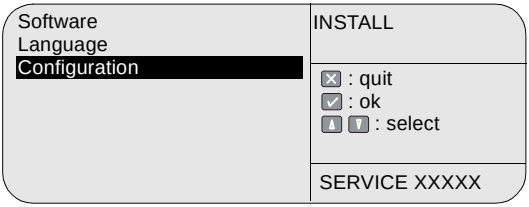

The Centricity™ SP1001 will display the Install configuration menu:

Please remove right side panel and insert the CPF- floppy in diskette drive and press ☑	INSTALL CONFIGURATION
	☒ : quit ☑ : ok
	SERVICE XXXXX

4 Open the side panel by unlocking the two locks at the side of the machine.

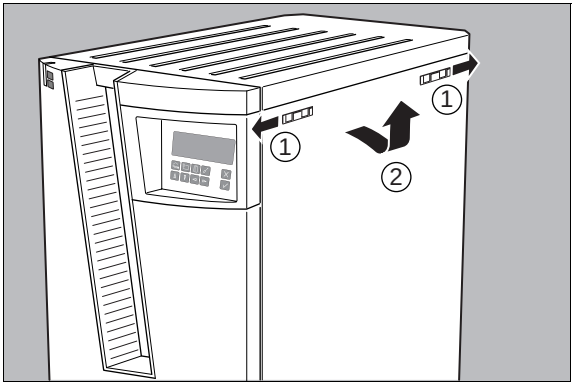

5 Remove the side panel.

The disk drive is located at the bottom of the machine.

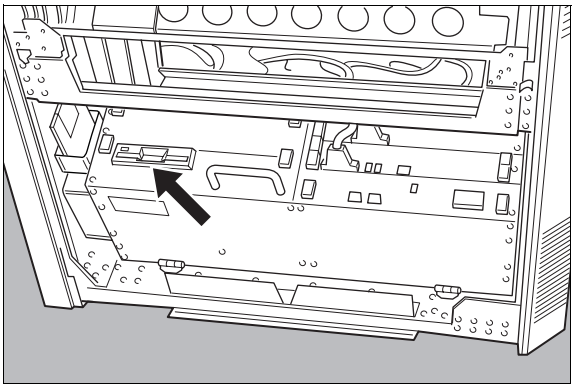

6 Insert the floppy with the new CPF-files in the disk drive and press the Confirm key.

The Centricity™ SP1001 will display:

copying <file name> . . .	INSTALL CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

Please remove the floppy and press ☑	INSTALL CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

7 Remove the floppy from the disk drive and press the Confirm key.

Parsing CPF file Please wait	INSTALL CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

8 Wait until the Centricity™ SP1001 displays:

Confirm ID or select new: SP1001xxxxxxxx1 ..... 201 SP1001xxxxxxxx2 ..... 202 SP1001xxxxxxxx3 ..... 203 SP1001xxxxxxxx4 ..... 204 SP1001xxxxxxxx5 ..... 205 SP1001xxxxxxxx6 206	INSTALL CONFIGURATION ☒ : quit ☑ : ok ▲ ▼ : select SERVICE XXXXX

This screen offers you the possibility to change the IP address of the Centricity™ SP1001.

❖ *If the Centricity™ SP1001 displays the screen below, the image queue is not empty, and therefore you cannot change the IP address of the Centricity™ SP1001.*

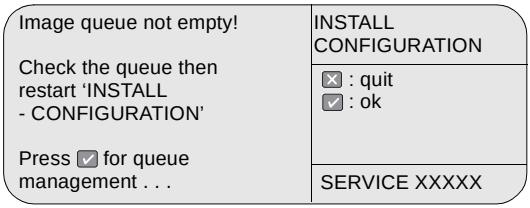
Image queue not empty!
Check the queue then restart 'INSTALL - CONFIGURATION'
Press ☑ for queue management . . .
INSTALL CONFIGURATION
☒ : quit
☑ : ok
SERVICE XXXXX

Press the Confirm key to consult the image transmission queue and if necessary delete the images in the queue. Refer to *'Consulting the images in the queue'* on page *52*. When the queue is empty, restart the 'Install - Configuration' function, refer to step **2**.

9 You have the choice whether or not to change the IP address:

◆ To keep the current IP address, press the Confirm key.

◆ To change the IP address of the Centricity™ SP1001, select an IP address and the corresponding name via the Up and Down keys and confirm.

The Centricity™ SP1001 will display:

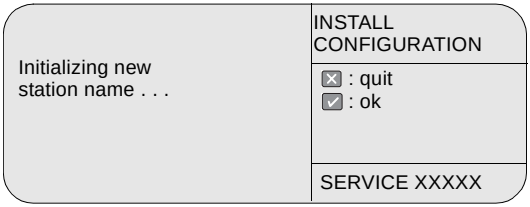

10 Wait until the Centricity™ SP1001 displays:

Configuration installed. Parameters have changed. You should refresh your backup now. Please insert the backup floppy and press ☑	INSTALL CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

You must make backup files with the new parameters.

11 Insert an empty formatted floppy into the disk drive and press the Confirm key.

The Centricity™ SP1001 will start copying the machine specific configuration data while displaying the Save configuration screen:

copying . . . D:\SOL_<serial#>.zip to A:<path><file name>	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

12 When the screen below is displayed, note down the serial number and the date.

Machine configuration saved. Label the floppy: Backup Centricity™ SP1001 S/N: <serial#> Date: <date> Please remove the floppy and press ☑	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

13 Remove the floppy from the disk drive and label it with the data from the screen.

14 Store the floppy with the CPF-files of the Centricity™ SP1001 and the backup floppy in the storage box at the bottom of the machine.

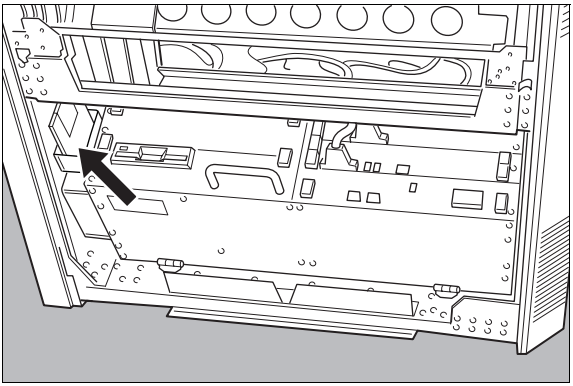

15 Reinstall the right side panel.

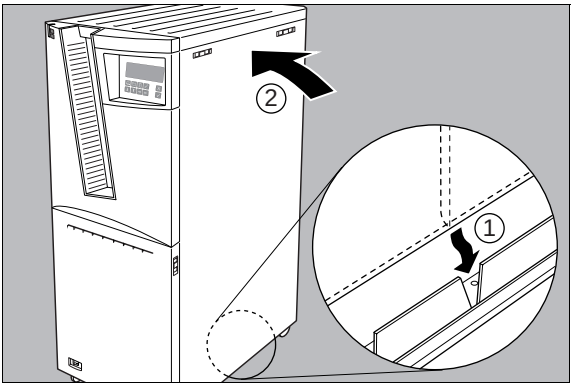

The Centricity™ SP1001 will restart automatically.

After start-up, the operator main screen will be displayed.

Saving the configuration data on a diskette (backup)

Via the Save configuration function in the key-operator main menu you can make backup files of the machine specific data.

To make a backup:

1 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

2 In the key-operator main menu, select ‘Save configuration’ via the Up and Down keys and confirm.

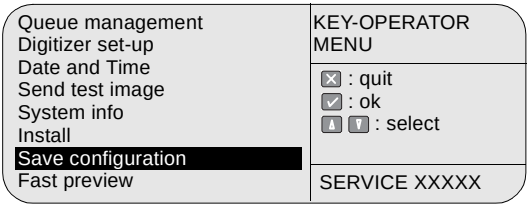

The Centricity™ SP1001 will display the Save configuration menu.

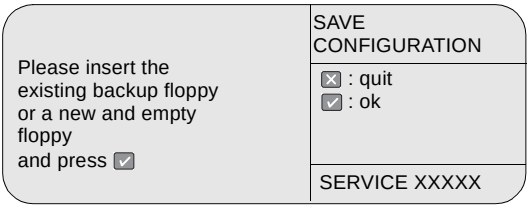

3 Open the side panel by unlocking the two locks at the side of the machine.

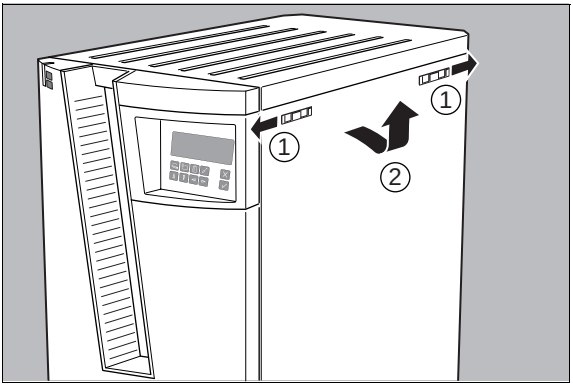

4 Remove the side panel.

The disk drive and the storage box for floppies are located at the bottom of the machine.

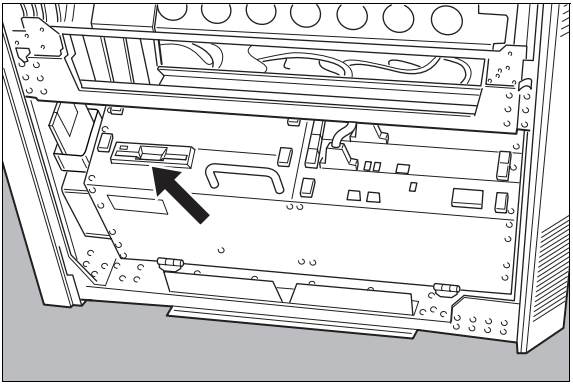

5 Insert the backup floppy onto which you want to store the configuration data and press the Confirm key.

The Centricity™ SP1001 will display:

copying . . . D:\SOL_<serial#>.zip to A:<path><file name>	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

6 When the screen below is displayed, note down the serial number and the date.

Machine configuration saved. Label the floppy: Backup Centricity™ SP1001 S/N: <serial#> Date: <date> Please remove the floppy and press ☑	SAVE CONFIGURATION ☒ : quit ☑ : ok SERVICE XXXXX

7 Remove the floppy from the disk drive and label it with the data from the screen.

8 Store the backup floppy in the storage box at the bottom of the machine.

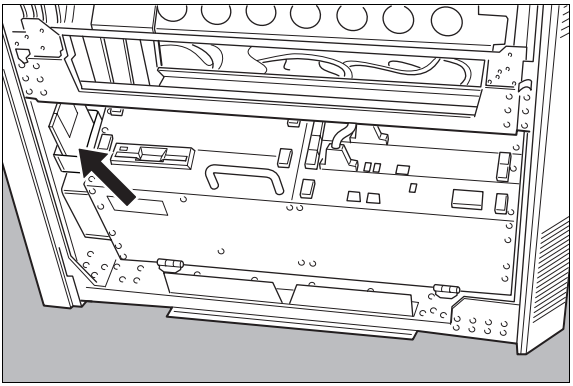

9 Reinstall the right side panel.

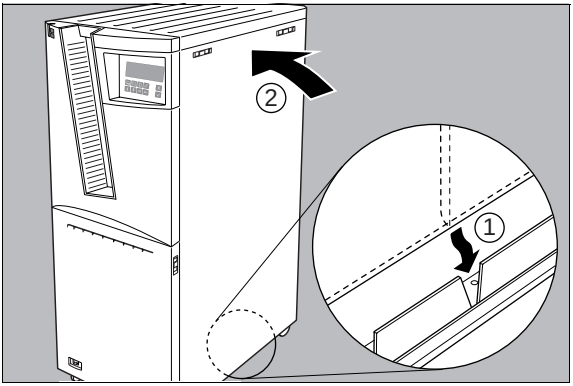

The Centricity™ SP1001 will restart automatically.

After start-up, the operator main screen will be displayed.

Enabling/disabling fast preview

If fast preview is enabled, the Digitizer will transmit the digital image data to the preview station as soon as you have entered the identification data. The image data are sent in blocks of typical 100 lines. Fast preview permits you to quickly assess whether the exposure was successful. As soon as the preview image has been calculated, the fast preview image will be replaced by the preview image. The fast preview feature may not be supported by your workstation, or may require a software upgrade of your workstation. For more information, contact your local service organization.

❖ *Your service engineer can configure which station serves as preview station. Either identifying and previewing images is done on the ID station, or a dedicated station is reserved for previewing images. For more information, contact your local service organization.*

To enable or disable fast preview:

1 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

2 In the key-operator main menu, select ‘Fast preview’ via the Up and Down keys and confirm.

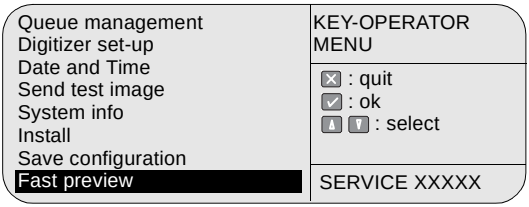

The Centricity™ SP1001 will display the Fast preview menu.

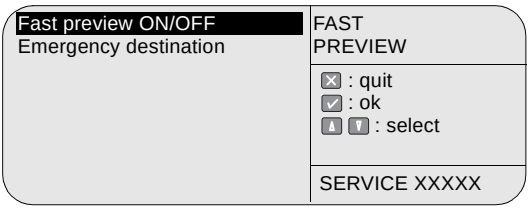

3 In the Fast preview menu, select ‘Fast preview ON/OFF’ via the Up and Down keys and confirm.

The Centricity™ SP1001 will display:

Fast preview: enabled	FAST PREVIEW
	☒ : quit ☑ : ok ◄ ► : change
	SERVICE XXXXX

4 Enable or disable fast preview via the Left and Right keys.

5 Confirm your choice.

The operator main screen is displayed.

Setting the fast preview station for emergency image plates

Both in the dedicated and in the interchangeable configuration, you must specify which station you wish to use as preview station for emergency image plates.

During the configuration, your service engineer has configured which station serves as preview station for normal image plates. Two different set-ups can be distinguished, either:

- Previewing images is done on the ID station.

  The preview image of normal images is sent to the ID station on which you identified the image. However, as for emergency image plates no data are entered and as several ID stations can be linked to one Digitizer, you must specify the ID station emergency preview images must be sent to.

- A dedicated station is reserved for previewing images.

  The ID station has been linked to a preview station. As a result, all images which are identified on the ID station are automatically sent to the corresponding preview station. As for emergency image plates no data are entered, you must specify the preview station for emergency images.

❖ *If you wish to use fast preview, refer to 'Enabling/disabling fast preview' on page 85.*

To set the preview station for emergency image plates:

1 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

2 In the key-operator main menu, select 'Fast preview' via the Up and Down keys and confirm.

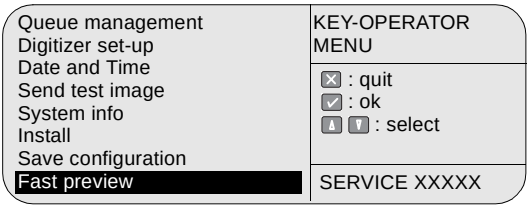

The Centricity™ SP1001 will display the Fast preview menu.

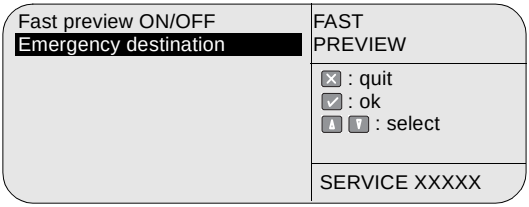

3 In the Fast preview menu, select ‘Emergency destination’ via the Up and Down keys and confirm.

The Centricity™ SP1001 will display:

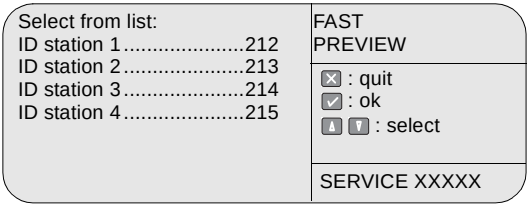

4 Select the ID station via the Up and Down keys.

- If you wish to preview emergency images on an ID station which serves both as ID station and as preview station, select the ID station.
- If you wish to preview emergency images on a dedicated preview station, select the ID station to which the preview station has been linked.

5 Confirm your choice.

The operator main screen is displayed.

Chapter 4

Preventive maintenance and troubleshooting

This chapter provides solutions to some problems you may encounter while working with the Centricity™ SP1001.

- ❑ Checking the image quality
- ❑ Troubleshooting checklist
- ❑ Replacing the erasure lamps
- ❑ Checking the voltage supply
- ❑ Solving image plate and cassette jams

Checking the image quality

The only maintenance action which you must perform is checking the image quality. Refer to the Reference manual of the image processing system.

Troubleshooting checklist

A survey of possible problems is listed below. If corrective actions are straightforward, they are given below. The more elaborate troubleshooting procedures are explained in detail in the following sections.

General errors

Error	Action
The Centricity™ SP1001 does not start up.	Refer to *'Checking the voltage supply'* on page *101*.

Errors during operation

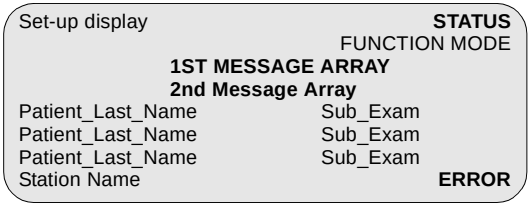

Status field:	**ERROR**
Error field:	'SERVICE XXXXX'
Contact your local service organization.	

Status field:	**ERROR**	
Error field:	'CODE XXXXX'	
MESSAGE 1	**Message 2**	**Action**
POWER SUPPLY OUT OF TOLERANCE	1. Check setting of voltage selector switch on back panel. 2. Check fuses of the machine 3. Check supply voltage.	Refer to *'Checking the voltage supply'* on page *101*.

Status field: Error field:	**ERROR** 'CODE XXXXX'	
IP JAM	1. Remove right side panel. 2. Put plate back into cassette. 3. Close right side panel.	Refer to *'Solving image plate and cassette jams'* on page *104*.

Status field:	**WARNING**	
MESSAGE 1	**Message 2**	**Action**
ERASURE LAMP [X], [Y], [Z] DEFECTIVE	Press ☑ to complete, IP is not erased	• Press Confirm key. • Refer to *'Replacing the erasure lamps'* on page *96*.
SCANNER WARNING	Possible bad image, press ☑	• Press Confirm key. • Contact your local service organization.
[PPNAME] NOT READY	Please check and press ☑	• Check image processing station. • If image processing station is ready, press Confirm key.
CORRUPTED MESSAGE IN QUEUE	Please press ☑ and check queue	• Press Confirm key. • Refer to *'Consulting the image transmission queue ('Queue management')'* on page *48*.
UNKNOWN DESTINATION [PPNAME]	Please press ☑ and check queue	• Press Confirm key. • Refer to *'Consulting the image transmission queue ('Queue management')'* on page *48*.
ERROR WHILE LOADING LANGUAGE FILE	Default language is used, please press ☑	• Press Confirm key. English will be used. • Restart Centricity™ SP1001. • If the problem persists, contact your local service organization.

Status field:	WARNING	
MESSAGE 1	**Message 2**	**Action**
PARTLY SCANNED IP DETECTED	Possible loss of image, press ☑	• Press Confirm key. • Check image at destination.

Status field:	LOCKED	
MESSAGE 1	**Message 2**	**Action**
IP NOT SUFFICIENTLY ERASED	Press ☑ and erase again	• Press Confirm key. • Refer to *'Re-erasing an image plate'* on page *38*.
EMPTY CASSETTE	Press ☑ to get cassette	• Press Confirm key. • Remove cassette. • Insert cassette containing image plate.
CASSETTE WRITE ERROR	Press ☑ to get cassette	• Press Confirm key. • Remove cassette. • Use another cassette. • If problem persists with other cassettes, contact your local service organization.
WRONG CASSETTE	Press ☑ and remove cassette.	• Press Confirm key. • Remove cassette. • Insert correct cassette in the right way.
CASSETTE IDENTIFICATION ERROR	Press ☑, remove and identify	• Press Confirm key. • Remove cassette. • Re-identify cassette. • Re-insert cassette.
CASSETTE READ/ WRITE ERROR	Press ☑, remove and try again	• Press Confirm key. • Remove cassette. • Re-insert cassette. • If problem persists, initialize and identify cassette via ID Station. • If problem persists with other cassettes, contact your local service organization.

Status field:	LOCKED	
MESSAGE 1	**Message 2**	**Action**
CASSETTE NOT IDENTIFIED	Press ☑, remove and identify	• Press Confirm key. • Remove cassette. • Identify cassette. • Re-insert cassette.
24 X 30 CM CALIBRATION MISSING	Press ☑ to accept or ☒	• Press Confirm key to treat 24 x 30 cm image plate without calibration or press Cancel key to treat cassettes with other formats. • Contact your local service organization.
SERVICE MODE	Please wait	Wait.
CASSETTE SLOT BLOCKED	Remove cassette, press ☑	• Remove cassette. • Remove obstructing objects. • Press Confirm key.
IMAGE-QUEUE FULL	Check queue	• Refer to *'Consulting the image transmission queue ('Queue management')'* on page *48*. • Check that the Centricity™ SP1001 is not off line (Refer to *'The display'* on page *15*).
UNKNOWN DESTINATION [PPNAME]	Press ☑, remove cassette and identify	• Press Confirm key. • Remove cassette. • Identify cassette. • Re-insert cassette. • Check the configuration of the system.
RIGHT SIDE PANEL NOT CLOSED	Close right side panel	Close the right side panel.
UNKNOWN IP-TYPE	Press ☑, remove cassette, call Service	• Press Confirm key. • Remove cassette. • Contact your local service organization.

Status field:	LOCKED	
MESSAGE 1	**Message 2**	**Action**
EMERGENCY DATA NOT DEFINED	Emergency keys disabled, press ☑	• Press Confirm key • Contact your local service organization.

Errors when handling diskettes

Error	Action
Wrong or missing volume label	• Remove floppy. • Insert floppy with correct label. • Press Confirm key.
Floppy not formatted	• Remove floppy. • Insert formatted floppy. • Press Confirm key.
Floppy full	• Remove floppy. • Insert empty formatted floppy. • Press Confirm key.
Floppy write protected	• Remove floppy. • Remove write protection from floppy. • Re-insert floppy. • Press Confirm key.

Replacing the erasure lamps

If the Centricity™ SP1001 displays the warning message ‘ERASURE LAMP [X], [Y], [Z] DEFECTIVE’, proceed as follows:

1 Note down the numbers of the broken lamps.

2 Check that the Centricity™ SP1001 is not scanning an image plate.

If the Centricity™ SP1001 is scanning an image plate, the status indicator at the top of the machine is green and flashing.

3 Switch off the Centricity™ SP1001 and disconnect it from the mains.

Disconnect the Centricity™ SP1001 from the mains before proceeding!

4 Open the lower front door by unlocking the two locks at the side of the machine.

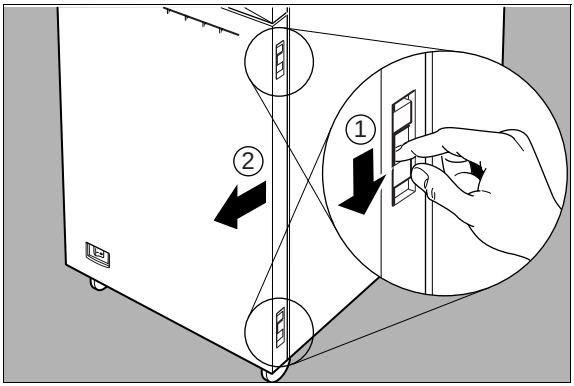

The erasure unit is located at the top of the lower machine part.

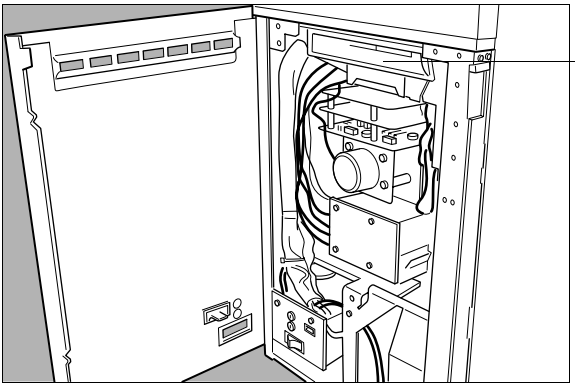

5 Push the spring-loaded lever down to unlock the erasure unit and draw out the erasure unit.

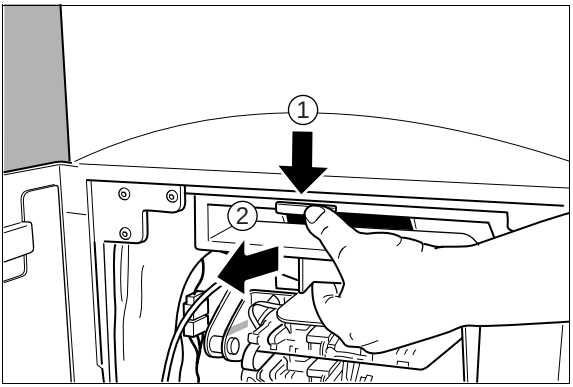

6 Slide out the erasure unit completely and place it on a stable surface.

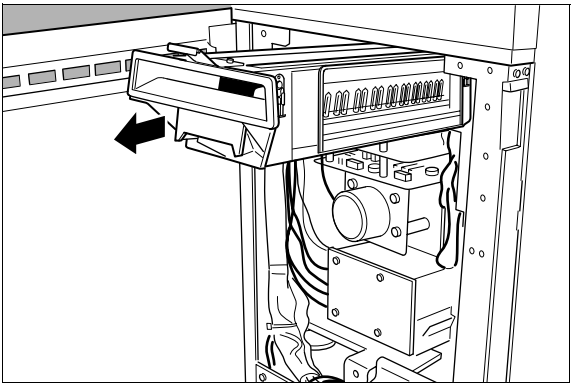

7 Loosen the two clamps at both sides of the erasure unit by pressing the clips downwards.

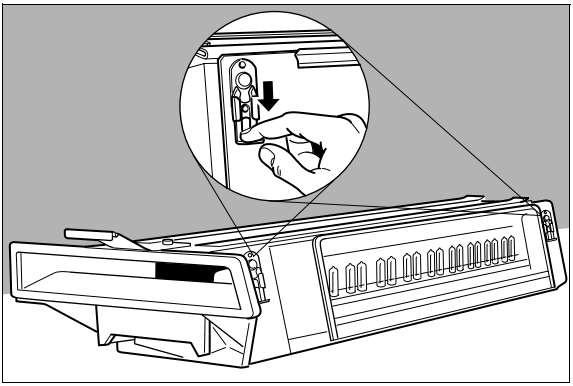

8 Open the cover at the side of the erasure unit.

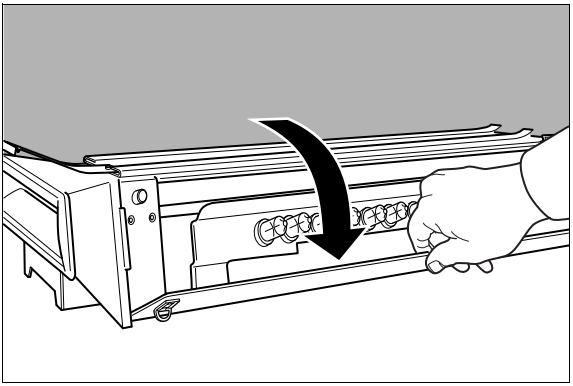

9 Locate the broken erasure lamps.

The erasure lamps are numbered from left to right.

The erasure lamps may be hot!

10 Remove the broken erasure lamps by pulling them out of the erasure unit.

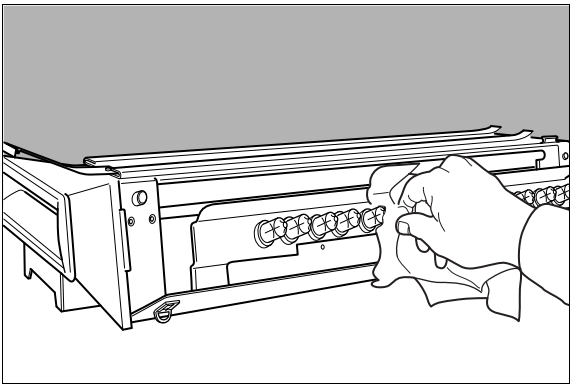

Do not touch the glass bulb of the erasure lamps with your fingers. Use gloves or a clean cloth.

11 Insert the new erasure lamps.

❖ *If the erasure lamps have been used for more than 2 years, replace all erasure lamps.*

12 Re-insert the erasure unit. Make sure the unit grips onto the rail at the top of the machine casing.

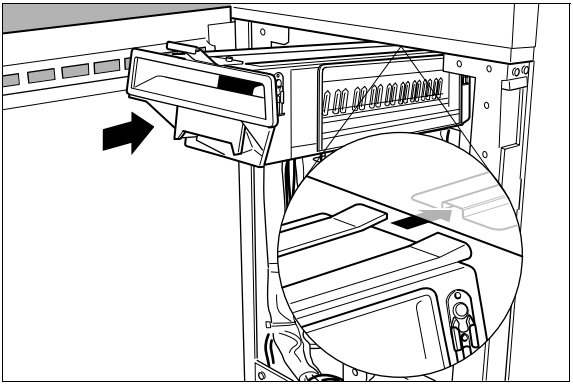

13 Push the lower front door of the Centricity™ SP1001 closed.

Checking the voltage supply

If the Centricity™ SP1001 does not start up or displays the message ‘POWER SUPPLY OUT OF TOLERANCE’ after it is switched on, proceed as follows:

1 Check that the setting of the voltage selector at the back of the machine matches the power supply voltage.

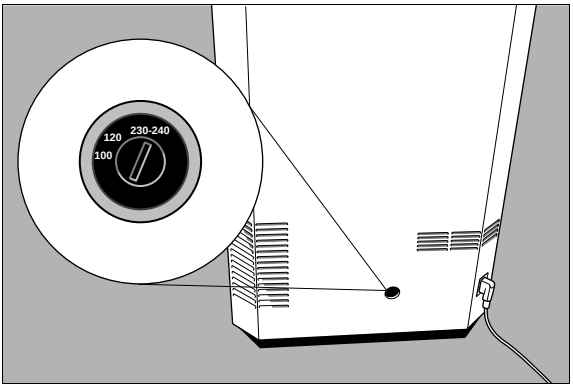

2 Check the main switch.

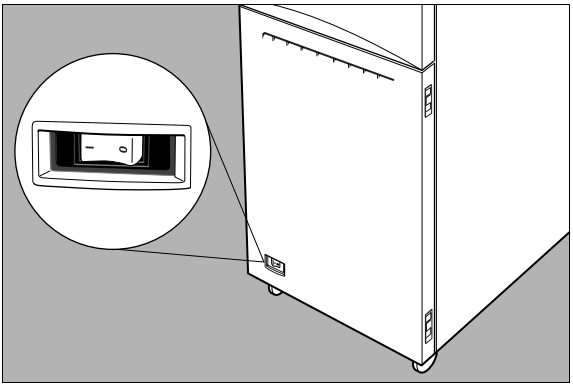

3 If this does not solve the problem, check the fuses:

Switch off the Centricity™ SP1001 and disconnect it from the mains!

4 Open the lower front door by unlocking the two locks at the side of the machine.

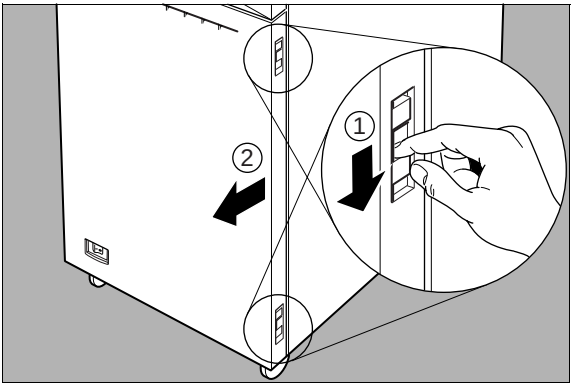

The fuses are located at the bottom of the machine.

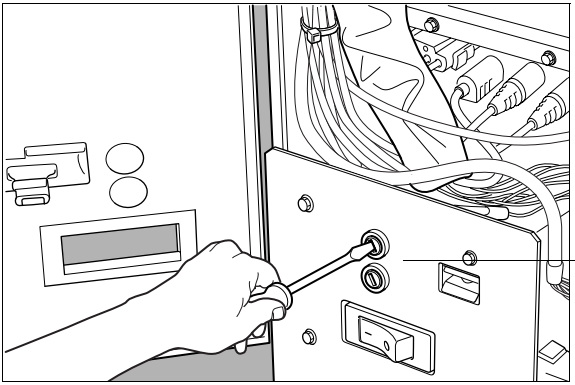

5 Use a screwdriver to loosen the fuses.

6 Remove both fuses.

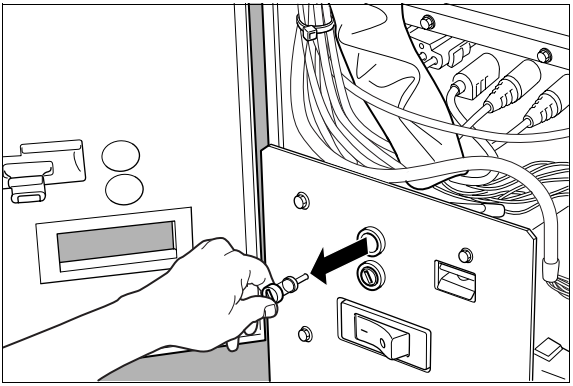

Replace the fuses only with fuses of the same type!

If the glass bulb of a fuse is clear, the fuse is still intact. Re-insert the fuse.

If the glass bulb of a fuse is black, the fuse has blown.

7 Replace the blown fuse(s) with new fuses of the same type.

8 Fasten the fuses with a screwdriver.

9 Push the lower front door of the Centricity™ SP1001 closed.

10 Plug in the Centricity™ SP1001 and switch it on.

11 If the Centricity™ SP1001 does not start up or displays the message ‘POWER SUPPLY OUT OF TOLERANCE’ after it is switched on, check the mains.

12 If the problem persists, contact your local service organization

Solving image plate and cassette jams

If the Centricity™ SP1001 displays the warning message ‘IP JAM’, proceed as follows:

Switch off the Centricity™ SP1001 and disconnect it from the mains!

1 Open the side panel by unlocking the two locks at the side of the machine.

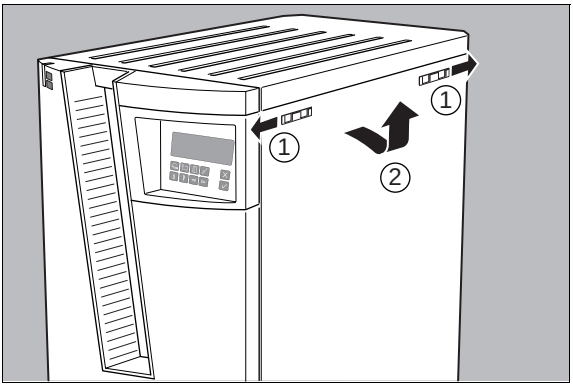

2 Remove the side panel of the Centricity™ SP1001.

3 Check the position of the image plate:

- If the image plate is still completely in the cassette, go to Section *‘The image plate is still completely in the cassette’* on page *105*.
- If the image plate is only partly in the cassette, go to Section *‘The image plate is only partly in the cassette’* on page *106*.
- If the image plate is not in the cassette, go to Section *‘The image plate is not in the cassette’* on page *108*.

The image plate is still completely in the cassette

Reinstall the right side panel.

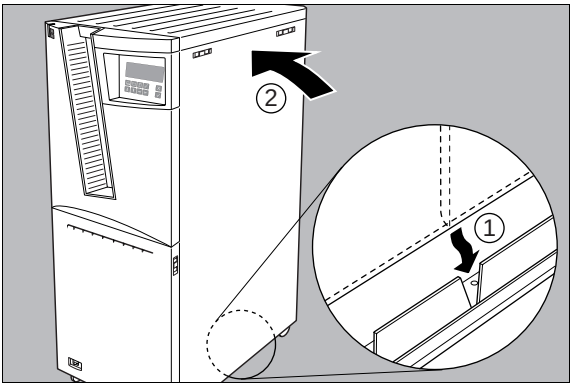

The Centricity™ SP1001 will restart automatically and return the cassette. If this is not the case, contact your local service organization.

The image plate is only partly in the cassette

1 Try to slide the image plate completely into the cassette.

If you do not succeed in sliding the image plate back into the cassette, contact your local service organization.

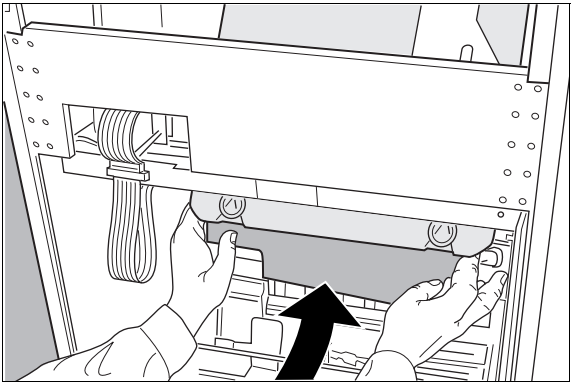

Do not close the cassette manually.

Take care to position the image plate within the inner edge of the cassette as illustrated below.

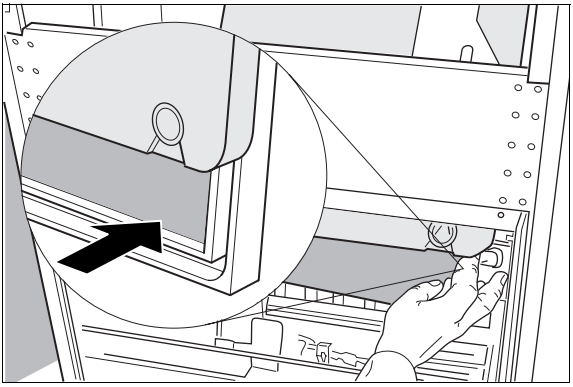

2 Reinstall the right side panel.

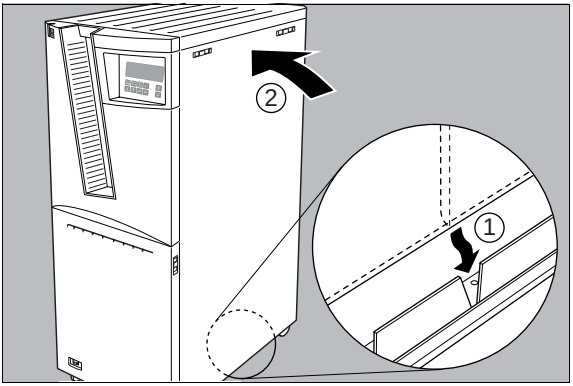

The Centricity™ SP1001 will restart automatically and return the cassette. If this is not the case, contact your local service organization.

The image plate is not in the cassette

1 Check the position of the image plate:

- If the image plate is located in the upper part or at the center of the Centricity™ SP1001, try to slide the image plate completely into the cassette.

  If you do not succeed in sliding the image plate back into the cassette, contact your local service organization.

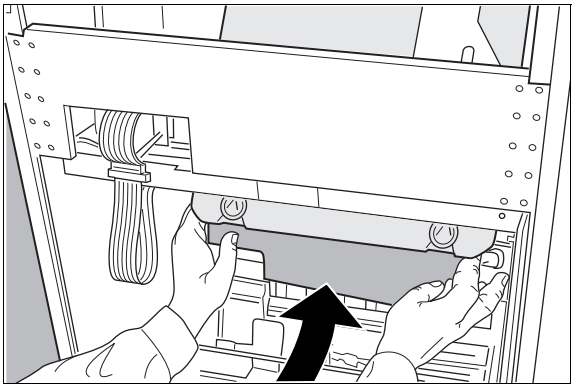

Do not close the cassette manually.

Take care to position the image plate within the inner edge of the cassette as illustrated below. Subsequently, proceed with step **4**.

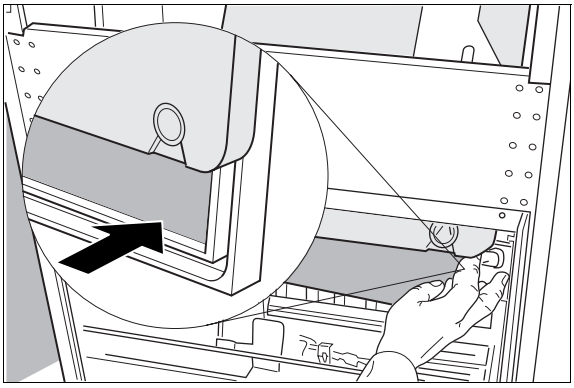

- If the image plate is located at the bottom of the Centricity™ SP1001, proceed with step **2**.

2 Tip the unit at the bottom of the machine towards you.

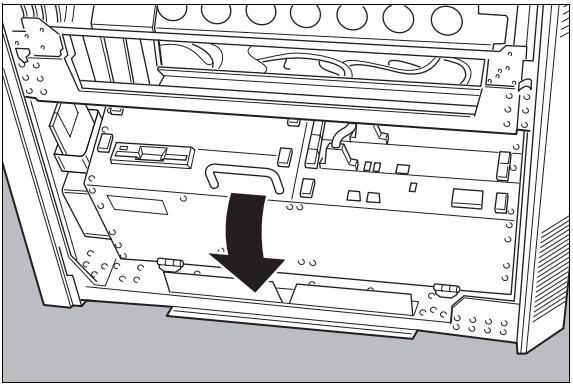

3 Remove the image plate very carefully.

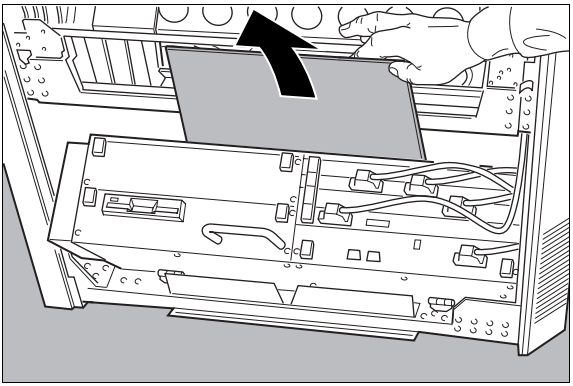

4 Reinstall the right side panel.

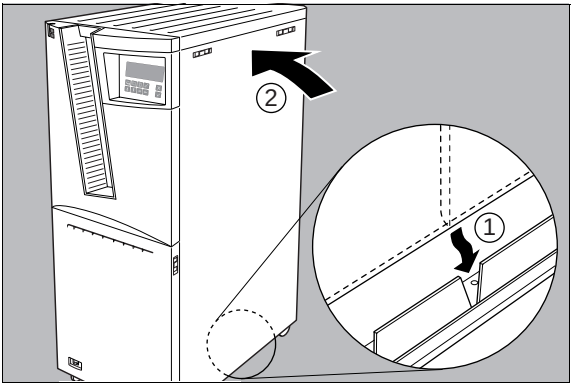

The Centricity™ SP1001 will restart automatically and return the cassette. If this is not the case, contact your local service organization.

5 If you had to remove the image plate from the Centricity™ SP1001, inspect the image plate. If it is not damaged, insert it into the cassette.

Appendix A

Equipment information sheet

Specifications

Product description	
Type of product	Digitizer
Commercial name	Centricity™ SP1001
Model number	5155/2xx
Manufactured for	GE Medical Systems Information Technologies, USA
Labelling	
CE	93/42 EEC ‘Medical Devices’ (Europe)
UL	UL 1950, CSA 22.2 No. 950 (North America)
CUL	(North America)
Dimensions	
Length, at cassette slot	730 mm
Length, at foot	700 mm
Width	450 mm
Height	1408 mm
Weight	
Unpacked	215 kg
Electrical connection	
Operating voltage	Europe: 230 V ± 10% USA: 120 V + 6%, -10% Japan: 100 V ± 10%
Mains fuse protection	Europe: 16 A, slow blow USA & Japan: 15 A, slow blow
Mains frequency	50/60 Hz

Power consumption	
Standby	
• 230 V/ 50 Hz configuration	230 W
• USA: 120 V/ 60 Hz configuration	216 W
• Japan: 100 V/ 60 Hz	220 W
During operation	
• 230 V/ 50 Hz configuration	max. 1610 W
• 120 V/ 60 Hz configuration (USA)	max. 1440 W
• 100 V/ 60 Hz (Japan)	max. 1500 W
Environmental requirements	
Room temperature	15 °C - 30 °C
Maximum temperature change	0.5 °C/min.
Relative humidity	10 % - 75 %
Magnetic field (Dynamic)	compliant with EN 61000-4-8, Level 5
Sunlight exposure	not be operated in full sunlight
Warming-up time	
• Cold start	fully operational after max. 30 min.
• Warm start	fully operational after self-test if not switched off for more than 3 min., after 30 min. operation
Cassette format	**corresponding IP format**
24 x 18 cm	238 x 178 mm
30 x 24 cm	298 x 238 mm
35 x 35 cm	354 x 354 mm
35 x 43 cm	354 x 430 mm
30 x 15 cm	298 x 148 mm
12 x 10”	303 x 252 mm
10 x 8”	252 x 201 mm

Physical emissions	
Noise emission (sound power level according to ISO 7779)	
• During scanning	max. 65 dB(A)
• Standby	max. 45 dB(A)
Radio frequency emission	according to EN 55022:1997, Class B and FCC, Part 15, Subchapter B, Class A
Heat emission	
• During scanning	max. 1610 W
• Standby	230 W
Cassette return time	60 - 72 secs
End of Life	
Estimated product life (if regularly serviced and maintained according to GEMS instructions)	7 yrs.

Appendix B

Index

Index

A

AE-title 60
Audio signals
  meaning 19
  on/off 56

B

Backup 81
Beeps. See Audio signals

C

CALIBRATION MISSING 94
Cassette
  See also Image plate
  formats 113
  identifying without ID Tablet 11
  inserting 26, 29, 36, 43, 45
CASSETTE IDENTIFICATION ERROR 93
CASSETTE NOT IDENTIFIED 94
CASSETTE READ/WRITE ERROR 93
CASSETTE SLOT BLOCKED 94
CASSETTE WRITE ERROR 93
Changing the destination 54
Clock 57
CODE XXXXX. See Errors
Communication, testing 58
Compliance 8
Configuration
  dedicated 11
  interchangeable 10
Consulting
  images in the queue 48
  information 59
CORRUPTED MESSAGE IN QUEUE 92
Customer parameters, installing and activating 75
Customizing the ADC Solo 52

D

Date and time 57
Dedicated configuration 11
Deleting images from the queue 50
Destination
- changing 54
- for fast preview 87
- out of operation 54

Device settings 59
Digitizer set-up 52
Digitizing
- emergency image plates
  - in dedicated configuration 35
  - in interchangeable configuration 31
  - with ID data 31
  - without ID data 33
- image plates
  - in dedicated configuration 28
  - in interchangeable configuration 25

Dimensions 112
Direct ID
- configuration 11
- operation mode 15

Disabling fast preview 85
Display
- location 12
- messages 15

E

Electrical connection 112
Emergency button
- function 18
- location 12

Emergency cassette. See Emergency image plate
EMERGENCY DATA NOT DEFINED 95
Emergency image plate
- image plate with ID data 31
- image plate without ID data 33
- in dedicated configuration 35
- in interchangeable configuration 31
- preview destination 87

Emergency key 13
EMPTY CASSETTE 93
Enabling fast preview 85
Erasing 38
ERASURE LAMP X, Y, Z DEFECTIVE 92
Errors 91
- CODE XXXXX 91
- during installation 95
- during operation 91
- ERROR CODE XXXXX 91
- ERROR SERVICE XXXXX 91
- Error status 15
- ERROR WHILE LOADING LANGUAGE FILE 92
- general 91
- when handling diskettes 95

F

Fast preview
- destination for emergency image plates 87
- enabling/disabling 85

Floppy full 95
Floppy not formatted 95
Floppy write protected 95

G

Ghost images, preventing 38

I

Icons 13, 18
Identified emergency image plate 31
Identifying without ID Tablet 11
Image plate
  erasing 38
  formats 113
  reading
    in dedicated configuration 28
    in interchangeable configuration 25
Image processing station, out of operation 54
Image quality, checking 90
Image transmission, enabling/disabling 52
IMAGE-QUEUE FULL 94
Information
  on Centricity™ SP1001 59
  on network 61
Inserting cassette 26, 29, 36, 43, 45
Install 63, 69
Installing
  customer parameters 75
  languages 69
  software 63
Interchangeable configuration 10
IP JAM 92
IP NOT SUFFICIENTLY ERASED 93

K

Key-operator menu 16
Key-operator mode 9
Keypad
  keys 13
  location 12
Keys
  confirm key 13
  emergency key 13
  erase key 13
  escape key 13
  key-operator key 13
  service key 13

L

Languages, installing and activating 69
Laser, safety instructions 8
Latent image, erasing 38
LOCKED 93

M

Maintenance 89
Mode
- key-operator mode 9
- operator mode 9
- service mode 9

N

Network settings 61
Not ready 15, 25, 42, 44, 92

O

Off line 15
Operating mode
- EMERGENCY 15
- EMERGENCY BUTTON 15
- ERASURE 15
- key-operator mode 9
- operator mode 9
- service mode 9

Operating principle 6
Operator main screen 16

P

Parameters
- ADC Solo 59
- network 61

PARTLY SCANNED IP DETECTED 93
Power consumption 113
POWER SUPPLY OUT OF TOLERANCE 91
Preview destination for emergency image plates 87
Printer
- not ready 15
- out of operation 54
- rerouted 15

Processing
- emergency image plates
  - in dedicated configuration 31
  - in interchangeable configuration 35
  - with ID data 31
  - without ID data 33
- image plates
  - in dedicated configuration 28
  - in interchangeable configuration 25

Q

Queue
- consulting images 48
- deleting images 50

Queue management 48

R

Reading
- emergency image plates
  - in dedicated configuration 35
  - in interchangeable configuration 31
  - with ID data 31
  - without ID data 33
- image plates
  - in dedicated configuration 28
  - in interchangeable configuration 25

Regulations 8
Rerouted 15
Rerouting the destination 54
RIGHT SIDE PANEL NOT CLOSED 94

S

S/N (Serial number) 60
Safety
- general instructions 7
- instructions for laser products 8
- precautions 7
- regulations 8, 112

Save configuration 81
SCANNER WARNING 92
Scanning
- emergency image plates
  - in dedicated configuration 35
  - in interchangeable configuration 31
  - with ID data 31
  - without ID data 33
- image plates
  - in dedicated configuration 28
  - in interchangeable configuration 25

Sending test images 58
Service 9
- SERVICE MODE 94
- SERVICE XXXXX 91

Setting date and time 57
Software 60
- installing and activating 63
- updating 63

Standards 8
Station 60
Status 15
- BUSY 15
- error 15
- LOCKED 15
- off line 15
- READY 15
- WARNING 15

Status indicator
- location 12
- meaning 17

Stray radiation, exposure to 38
Switching off 22
Switching on 20
System status 15

T

Test image, sending 58
Testing communication 58
Total cycles 60
Transmission of images, enabling/disabling 52
Troubleshooting 91

U

Unidentified emergency image plate 33
UNKNOWN DESTINATION 92, 94
UNKNOWN IP-TYPE 94
Updating
- customer parameters 75
- languages 69
- software 63

User interface 12
- control panel 13
- display 15
- keypad 13

V

Voltage selector, location 20

W

Warming-up time 113
WARNING 92
WRONG CASSETTE 93
Wrong or missing volume label 95

CE

Made in Belgium

Published by GE Medical Systems Information Technologies, Milwaukee, WI 53223, USA

5010A EN 20020315